



How to Enter programming mode

THE INSTALLER ...	THE MODULE ...
<ul style="list-style-type: none">• Press and hold the hood pin for 4 seconds.• Release the hood pin (the parking lights will turn ON).• While the parking lights are on, press the hood pin once more and release immediately.• You now have 20 seconds to select one of the sub-menus.• To exit programming mode, close the HOOD.	Parking Lights "ON" "ON" for 20 seconds

Transmitter Programming Procedure

1. Enter programming Mode (page-1) — the parking lights will stay on for up to 20 seconds.
2. Before the lights go out, turn the ignition key to the IGNITION ON (RUN) position and immediately to the OFF position.
3. Press and hold the LOCK button and keep it down until the parking lights flash 5 times quickly.
4. The transmitter has been stored in memory.
5. To exit: close the hood. **Note:** Each unit can store 4 remotes in its memory.

To program a transmitter on the second vehicle for multi-car operation, you must press the TRUNK button (instead of LOCK or UNLOCK) in step 3 of the transmitter programming procedure:

