

## Remote Pairing

---

Prepare the vehicle system to be Paired with a new remote

1. Open a door.
2. Turn the key to the ON position.
3. Within 5 seconds press and release the Control button on the Control Center one time.
4. Within 5 seconds, press and hold the Control button on the Control Center. The status LED will flash one time and the siren then chirps to confirm the vehicle is ready for remote pairing.
5. Release the Control button and proceed below.

Note: If no remote pairing results, the system will exit after 60 seconds.

Prepare the new Responder LE remote to be Paired with the system:

Remote Pair matches your LE remote to the system. Make sure the LE remote is set for the desired Car 1 (Default) or Car 2 operation for the system it will be paired with.

1. Press and hold the *f* button for 8 seconds.

Note: If Car 2 mode is on, ignore the Car Select beep after 3 seconds

2. Wait for the Transmit LED to light solid and the remote to beep. Release the *f* button.
3. Press the  button for 1 second. The transmit LED will blink 3 times and beep 3 times.
4. Within 5 seconds, press the  button.
5. The vehicle siren will chirp and the LED indicators on the remote will light in sequence with sound. You have now successfully learned the remote to the vehicle remote start and security system.
6. Press the *f* button two times to exit learn routine on the remote. The transmit LED will turn off and exit tone will sound.

Prepare the vehicle system to be Paired with the companion or a new 1-way remote as described above.

Note: If no remote pairing results, the system will exit after 60 seconds.

Prepare the companion 1-way remote control to be Paired with the system:

Make sure the remote is set for the desired Car 1 (Default) or Car 2 operation for the system it will be paired with.

1. Press and hold the *f* button for 8 seconds.

Note: If Car 2 mode is on, ignore the Car Select beep after 3 seconds.

2. Wait for the Transmit LED to light solid and the remote to beep. Release the *f* button.
3. Press the  button for 1 second. The transmit LED will blink 3 times and beep 3 times.
4. Within 5 seconds, press the  button.
5. The vehicle siren will chirp. You have now successfully learned the remote to the vehicle remote start and security system.
6. Press the *f* button two times to exit learn routine on the remote. The transmit LED will turn off and exit tone will sound.