

Remote Programming



DC2/DC3 MODULE MUST BE UNLOCKED/DISARMED TO ENTER REMOTE PROGRAMMING.



STEP 1:
Cycle ignition ON and OFF five times (5x OFF/ON) rapidly within 7 seconds. Leave on ON position.



STEP 2:
Parking Lights will flash once (1x).



STEP 3:
On the antenna, press the button once (1x). The LED in the antenna will come on RED. (Only required for FMX antennae. Ignore if there is no button.)



STEP 4:
Press the LOCK button on the Compustar remote.*



STEP 5:
Parking Lights will flash once (1x)



STEP 6:
To program additional Compustar remotes, repeat steps 4 and 5 (up to 4 remote slots available).



STEP 7:
After you are done programming remotes, wait until you see two Parking Light flashes (2x).



STEP 8:
Turn ignition to OFF position.



IMPORTANT NOTE!

Programming will only work with a LOCK command. If using a 1-button remote, make sure not to double-tap (unlock) or hold (remote start) the button, or it will NOT learn.

REMOTE PROGRAMMING SUCCESS / ERROR CODES

RED LED x4: RS is running, must shut down first.

RED LED x5: Engine is running, must shut down first.

RED LED x6: System is armed or locked, must unlock/disarm to learn remote.

RED LED x7: Bypass not learned, must learn bypass first.



Tech Support:
FB Support Group:

Give Us a Call!

(888)820-3690, Option 2, Option 1
facebook.com/groups/firsttechtchsupportgroup