

This normally open starter kill relay application below relies on a ground from the alarm when disarmed and 12 volts (+) from the ignition to enable the driver to start the vehicle. * Note: most alarms with this feature will not provide this grounded output when power ,12 volts (+), to the alarm is not present, even if the alarm is grounded.

Normally Open Starter Kill

