

## CODE LEARNING OF ADDITIONAL TRANSMITTER(S)

Four different remote controls can be programmed for a given vehicle. If a fifth remote is added, the first remote is deleted.

**Note:** When the first code learning command is sent, all the old codes are cleared out. Therefore if you want to add a new remote, all the old ones must be reprogrammed as well.

One or more remote transmitters can be added. To do this, programming is accessed as follows:

- Open hood.
- Insert key in the ignition and turn to the RUN position.
- Apply the brakes once.
- You now have 10 seconds to turn the key from RUN to the STOP position 3 times.
- If this sequence is correctly carried out, the control module flashes parking lights (4 flashes). You may then proceed to the next step.
- Press any button on the new remote control. When access code of new remote control is memorized, the control module will confirm with flashing parking lights (1 flash).
- Repeat the above procedures for each remote control that has to be programmed (up to 4 remotes).
- Apply the brakes, parking lights flashes twice to indicate that the system is no longer into learning mode.

New remote(s) is (are) now added to the system.

## SAFETY CHECKS

In order to maintain a high safety standard, proceed with the following checks every month.

### HOOD SWITCH

- Remote start your vehicle.
- Open hood.

Engine should stop as soon as hood is opened.

If engine does not stop immediately, turn main switch to **OFF** position and leave it off until situation is rectified. Contact your service centre.

This document was created with Win2PDF available at <http://www.win2pdf.com>.  
The unregistered version of Win2PDF is for evaluation or non-commercial use only.  
This page will not be added after purchasing Win2PDF.