

1. CONNECT

2. PROTOCOL SELECTION


- a. Connect the C5040/MS-2 unit - The Blue LED will blink.
- b. Press and Release the programming button on the C5040/MS-2 to select the protocol from the list below:
 1. ADS / DSE (503 Air)
 2. Fortin
 3. Xpresskit
 4. Autostart (H.6.0 V.6.0 +) Smartstart / DSE (INT-V1)
 5. Autostart (H.6.0 V.6.0 -) Pager Legacy
 6. N/A
- c. Press and Hold the programming button until solid Green LED. To change the protocol mode after protocol has been saved follow the Factory Reset Procedure if needed and restart this procedure.
- d. Please refer to your distributor for specific Digital Remote Starter configurations when using the C5040/MS-2.
- e. For Fortin protocol ONLY (learning procedure):
 1. Enter the transmitter learning mode by following the Fortin module instructions.
 2. Once the Fortin module is in transmitter learning mode, the C5040/MS-2 Blue LED will blink. Press and Release the C5040/MS-2 programming button. The Green LED will light up to confirm learning of the C5040/MS-2 to the Fortin module.

3. VALIDATE

- a. Disconnect the C5040/MS-2 unit.
- b. Cycle ignition to the ON position.
- c. Re-Connect the C5040/MS-2 unit (DO NOT Press the programming button.)
- d. The LED will blink Purple rapidly for 15 seconds.
- e. During this period, Cycle ignition to the OFF position.
- f. If the vehicle door's unlocks, your programming is successful.

4. CONFIGURE

- a. Install the smartphone app.
- b. Create customer login (if one does not already exist.)
- c. Go to "Add vehicle".
- d. Enter the 9 digit **activation code**.

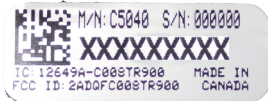

- e. Registration completed.

5. DELIVER

Move the vehicle to an **open space outside and turn ignition off** to allow the system to register in the network.

PIT-STOP

Note: "Pit-Stop" mode is supported ONLY with protocol 1, 2 and 3:

1. While your vehicle is parked and engine is idling, Press and Hold the C5040/MS-2 programming button until solid Green LED. The remote starter will enter the "Pit-Stop" mode.
2. Cycle the ignition to the OFF position and exit the vehicle. Engine will remain in function until the remote starter runtime is expired.

FACTORY RESET PROCEDURE

1. Disconnect the C5040/MS-2 main harness.
2. Press and Hold the C5040/MS-2 programming button while re-connecting the main harness.
3. When LED flashes Amber, Release the programming button.
4. Reset completed. Repeat the programming procedure.

(1) Connect when using with EVO-ALL, ADS-AL-CA or DBALL 2.
(2) HRN-DPP-01 harness required. (3) One-way only (no feedback on start errors.) (4) Optional input. Will detect Constant or Pulsed (+) output. (5) Optional. (6) Whenever diodes are used, connect to vehicle-side ignition.