

FOR PUSH BUTTON START CARS

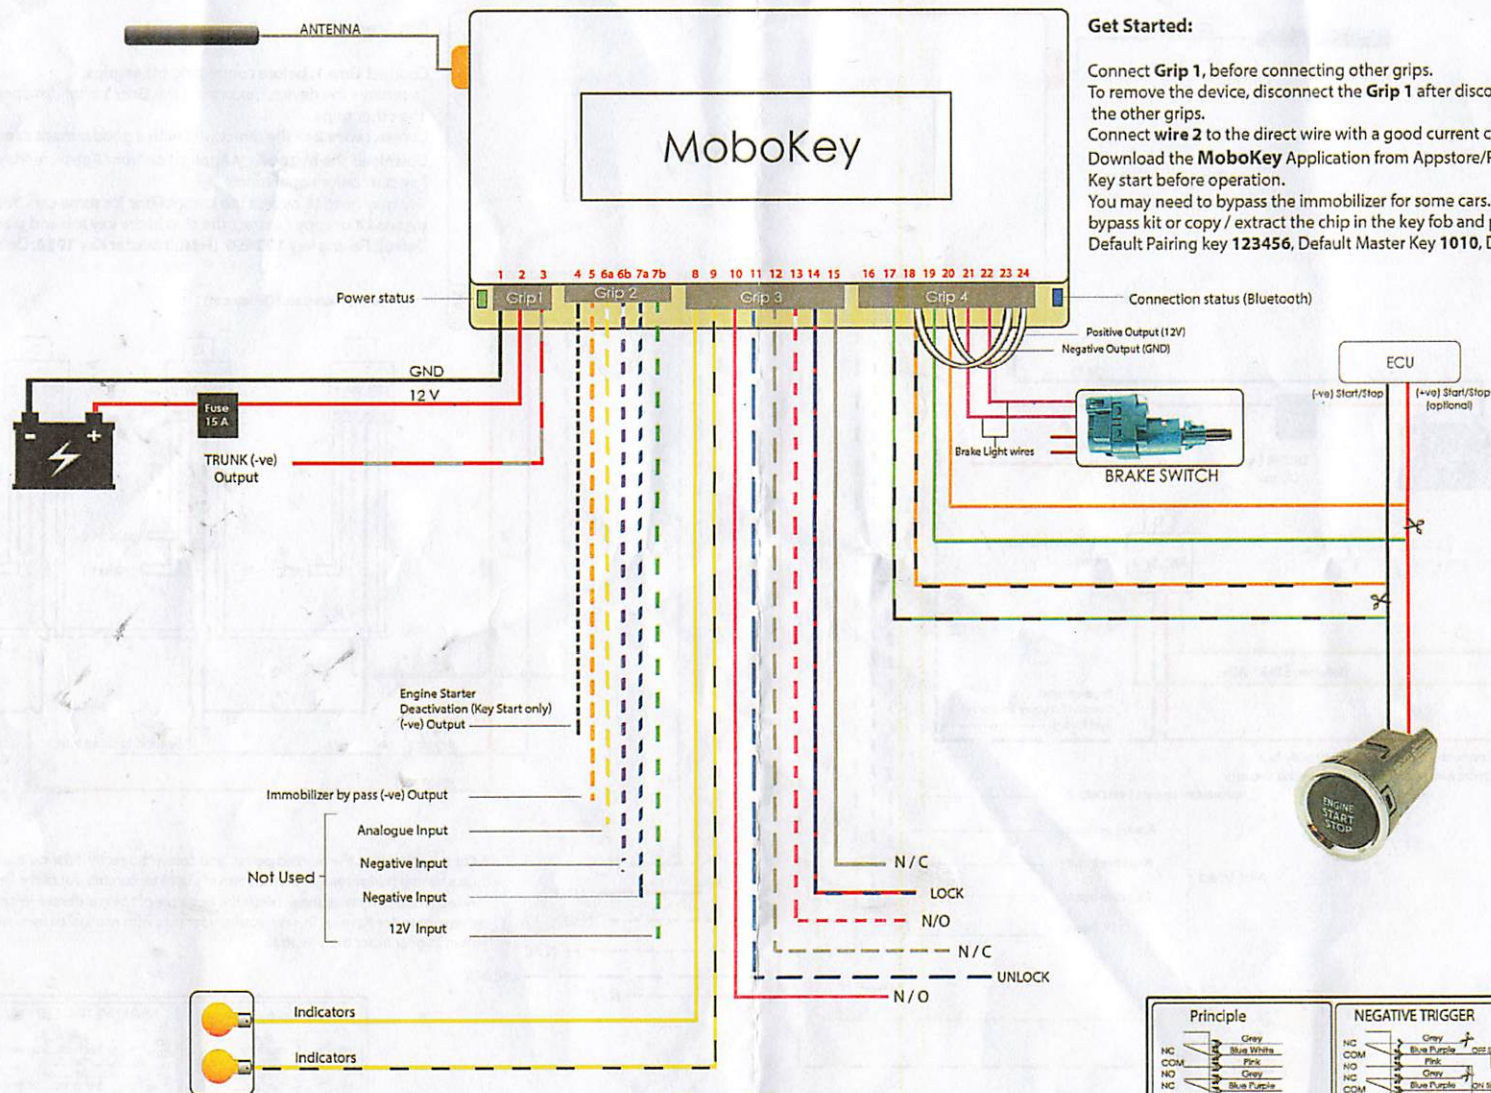


Figure 1.1



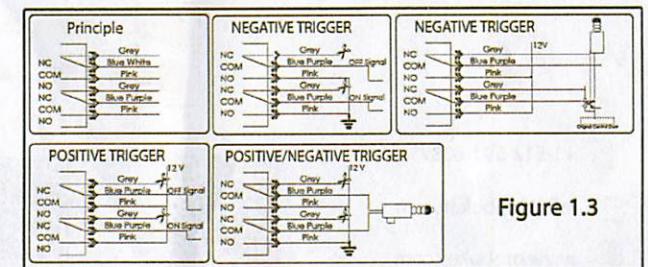


Figure 1.3

Use lock combination according to the locking mechanism of the car. 90 percent of the cars operate on negative trigger in which you need to connect the pick wires to the ground of the car and grey wires are not connected.

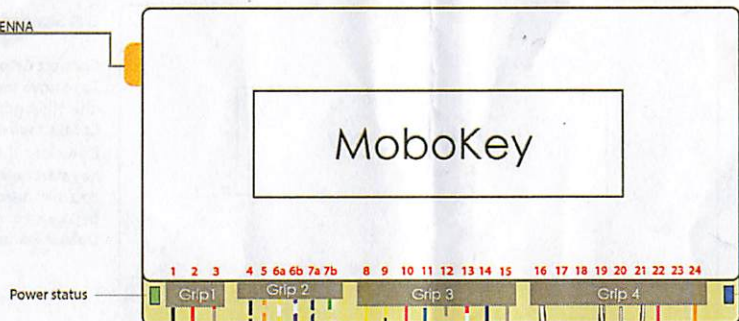

FOR TURN KEY START CARS

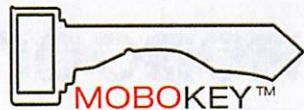

Get Started:

Connect **Grip 1**, before connecting other grips.
To remove the device, disconnect the **Grip 1** after disconnecting the other grips.
Connect **wire 2** to the direct wire with a good current capacity coming from the battery.
Download the **MoboKey** Application from Appstore/Playstore and configure it to Key start before operation.
You may need to bypass the immobilizer for some cars. You can use immobilizer bypass kit or copy / extract the chip in the key fob and place it near the key hole.
Default Pairing key **123456**, Default Master Key **1010**, Default Regular Key **1010**.

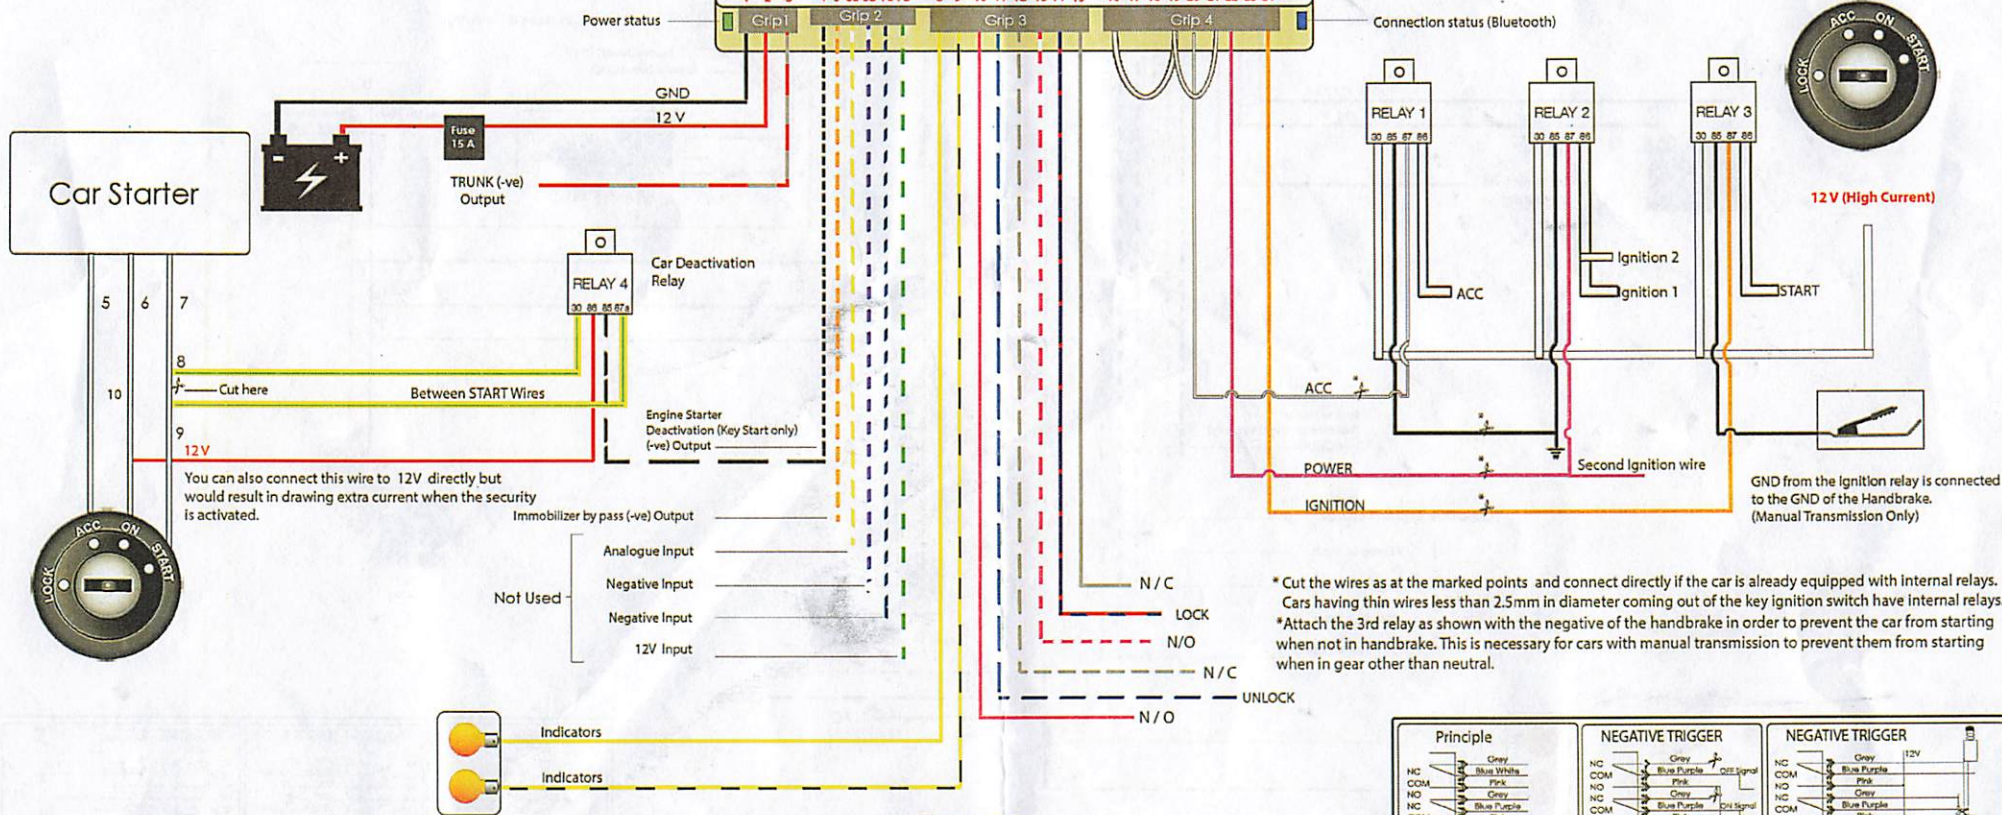


Figure 1.1

Use lock combination according to the locking mechanism of the car. 90 percent of the cars operate on negative trigger in which you need to connect the pick wires to the ground of the car and grey wires are not connected.

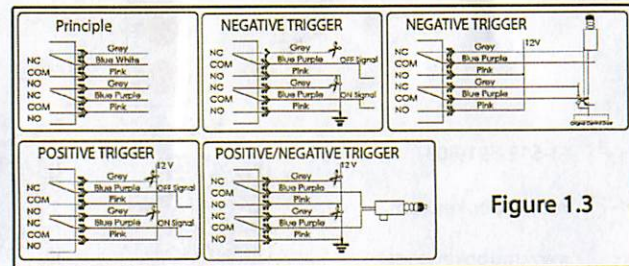


Figure 1.3

+1-512-591-8087

info@mobokey.com

www.mobokey.com



iOS App



Android App