



MASTER GUIDE


CM900 S/AS System **v1.11**

Firstech, LLC.
21903 68th Ave S.
Kent, WA 98032
Phone. 888-820-3690
Fax. 206-957-3330
Please visit www.firstechdata.com for additional installation resources


Table of Contents

Wire Schematic	2
Introduction	4
Kit Contents	5
Installation Basics	5
Remote Programming Routine	6
Valet Mode	6
Placement and Use of Components	7
Common Procedures	11
Wiring Descriptions	15
Feature Programming Tables	22
Feature Option Descriptions	27
Special Option Groups 1 & 2	41
Option Programming steps	44
Troubleshooting	48
Frequently Asked Questions	49
Contacts and Support pages	51

CM-900S Wiring Schematic (Remote Start)

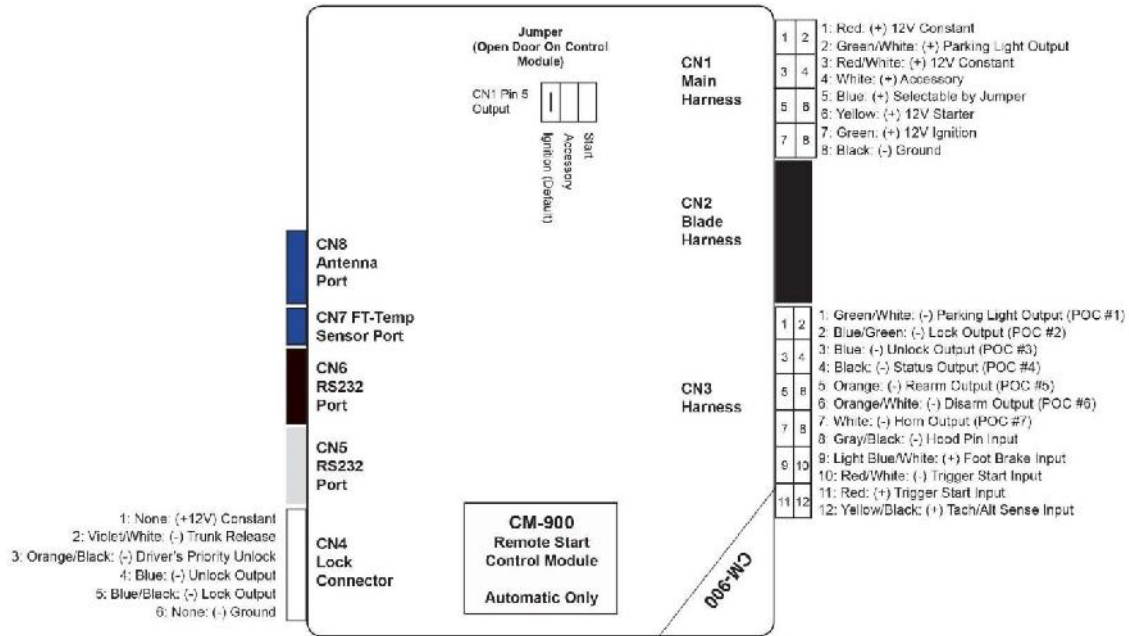

CM-900AS Wiring Schematic (Alarm-Remote Start)

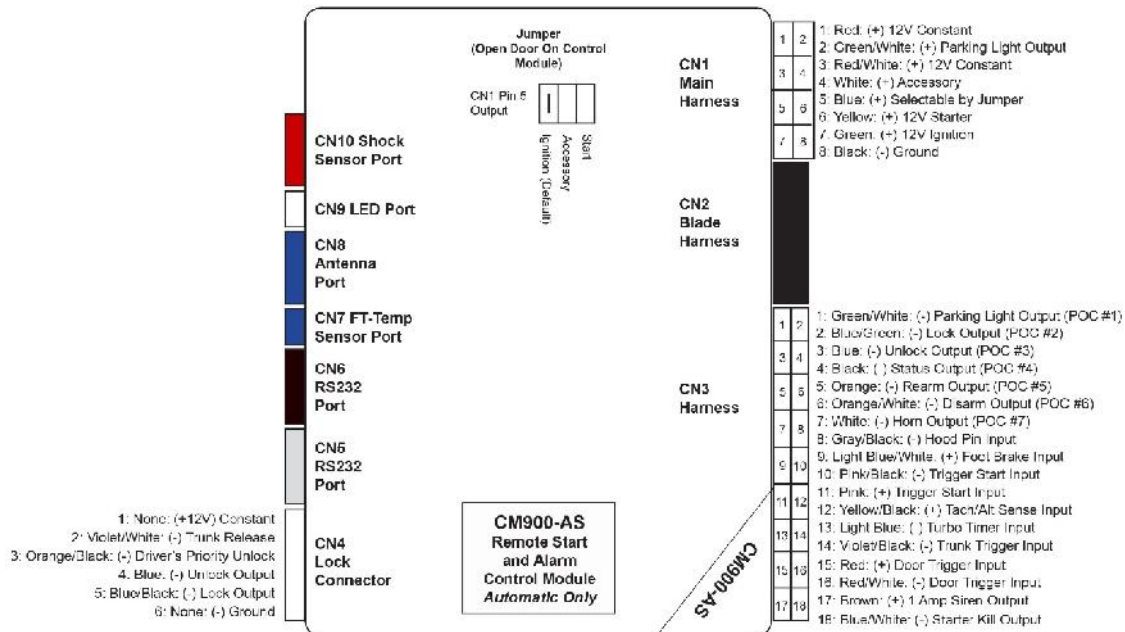

Introduction

Thank you!

For selecting a Firstech remote start security system as your product of choice. The following manual is a complete Master guide to the CM900 universal Control Module and is intended for experienced and authorized Firstech technicians only. If you need any further technical support, please call us at 888-820-3690 dial 9 then ext. 203 or visit our website at www.firstechdata.com



Caution: The Manufacturer's warranty will be void if this product is installed by anyone other than an authorized Firstech dealer. Firstech provides installation support services to authorized dealers only.

This manual may change frequently. Please check www.firstechdata.com for updates.

Kit Contents

All Firstech CM900 bundles include the following:

- CM900S or CM900AS main control module
- Wiring diagram sheet
- High Current ignition harness with one external relay (CM900AS only)
- Additional I/O Wiring harnesses
- Hood pin
- Mountable bright blue LED (CM900AS only)
- FT-SHOCK dual stage impact sensor (CM900AS only)
- RF Kits with remote(s), Antenna, and Antenna Cable

The following sensors are available but **not included** with every system:

- Drone
- Temperature sensor (FT-TEMP SENSOR)
- DAS II (2 stage impact, Tilt, Glass break all in one sensor)

The remote(s) and antenna are modular and are not specific to the control modules. You can pair almost any Firstech remote(s) and antenna receiver to the CM900 control module.

Any questions on contents please contact your distributor or us directly at 1.888.820.3690, Monday through Friday, 7A to 5PM Pacific Time.

Installation Basics

If you are new to installing Firstech Series Remote Starts and/or Alarms, we highly recommended that you thoroughly review this manual to installing your first unit.

- Remote Programming:**
You must code remotes to this system before anything will function. Begin by cycling the ignition ON and OFF five times within 10 seconds and press and release the Lock button (half second) on the first remote, and then press and release Lock button (half second) on the second remote. Make sure to program a remote in each of the 4 remote banks. You may program single remote into multiple banks if necessary

- The CM900 will be set to Tachless mode out of the box. If you wish to use Tach mode, complete the Tach programming procedure as described below and the CM will automatically switch to Tach mode.**

Tach learning procedure: When using tach mode this must be done before the first remote start attempt. Learn tach by: (1.) Starting the vehicle with the key, (2.) Press and hold the foot brake, then (3.) Activate the remote start sequence - one chirp and parking light flash indicates that the vehicle tach signal has been successfully learned. Two chirps and three parking light flashes indicate that the control module failed to see a proper tach signal. (These units have the option for Tachless and 3 second assume cranking).

- High Current 2nd Ignition Output (CN1 Blue Wire) (Jumper Programmable)**
- High Current Parking Light Output (CN1 Green/White Wire) (Programable Feature 1-06) High**
- Current Accessory Output (CN1 White Wire)**
- Optional Low Current Harness (FT-LC1) Available**
- 2nd RS232 Data Port (Grey CN6) Default DroneMobile Protocol w/Fortin Protocol Optional.**
- Lock connector functions added to I/O Connector**
Lock connector functions are now available via POC's There is also a lock connector for FT- DM600/FT-DM700 on rear of Control Module.
- Built-In Troubleshooting diagnostics**
Notice! In order to properly diagnose remote start/stop failure the parking light output must be connected to either (+) Positive or (-) Negative parking light circuit on the vehicle.

Remote Programming Routine

IMPORTANT: All remotes must be coded to the control module prior to performing all operations.

STEP 1: Activate programming mode by manually turning the vehicle's key between the Ign On and Off (or the Acc & On positions) five times within 10 seconds. The vehicle's parking lights will flash once with the successful completion of this step.

STEP 2: Within a 2 second period after the 5th ignition cycle tap (a quick 0.5 second press and release) the Lock button on the Firsttech remote. The parking lights will flash once to confirm the transmitter has been coded. Repeat step 2 for each additional remote, up to 4.

Note: if you only have 2 remotes please program each remote twice.

****parking lights will flash twice signaling the end of programming mode.**

****NEW****

Remote programming procedure: PTS (Push to Start vehicles) application

STEP 1: Set the vehicle to the ignition or “ON” position

STEP 2: Within 5 seconds push to the “OFF” position

STEP 3: Within 5 seconds set the vehicle to the ignition or “ON” position (do not start)

STEP 4: Within 5 seconds depress and release the foot brake 3 times *parking lights will flash 1 time to indicate remote programming is enabled

STEP 5: Tap (a quick 0.5 second press and release) the lock button on the remote * the parking lights will flash 1 time indicating the remote code has been accepted (Repeat step 5 for each additional remote, up to 4)

STEP 6: After 10 seconds of no valid remote codes being transmitted the CM will automatically exit programming mode

Valet Mode

Valet Mode disables all system features except for the keyless entry. Use Valet when servicing or loaning your vehicle to others to avoid any inconvenience or mishap when operating the vehicle. There are no visual indicators when the security system is in Valet Mode. There is a parking light indication when remote starting in Valet Mode. (3 flashes followed by 10 flashes). Also, when in Valet Mode, the keyless entry feature will still operate.

The system can be put into valet mode one of 3 ways:

1. While holding the foot brake (12V+ brake input), cycle the key to the Ignition or ‘On’ position and then back to the ‘Off’ position 5 times within 10 seconds. The parking lights will flash once indicating that the system has entered Valet Mode.
2. Turn the key to the Ignition or ‘On’ position then using a 4-button remote press and release the lock and trunk buttons together simultaneously for a half second. The vehicle parking lights will flash 1 time to indicate the system has successfully entered valet mode.

****NEW****

3. The user may enter valet mode by performing the PTS vehicle remote programming procedure and make sure there are no remotes transmitting.

Step 1: Set the vehicle to the ignition or “ON” position.

Step 2: Within 5 seconds turn ignition off

Step 3: Within 5 seconds set the vehicle to the ignition or “ON” position. (do not start)

Step 4: Press and release the foot brake 3 times within 5 seconds *parking lights will flash 1 time to indicate programming is enabled.

Step 5: After 10 seconds, the parking light will flash 2 times, indicating the system has entered valet mode

The System can be taken out of Valet mode by one of the following procedures:

1. **No Remote:** If there are no remotes or there are no remotes available you can exit Valet Mode by turning the key to the ignition on or ‘Run’ position then press and release the foot brake pedal 10 times within 10 seconds. This procedure will only deactivate Valet Mode it will not activate Valet Mode. The vehicles parking lights should flash 2 times to indicate the system has exited valet mode
2. **With Remote:** While within remote range of the vehicle, using a 4-button remote, press and release the lock and trunk button together simultaneously for a half second. The vehicle’s parking lights will flash 2 times to indicate the system has exited Valet Mode.

Placement and Use of Components

IMPORTANT: The placement and use of components are critical to the performance of this system.

Antenna and Cable

Firstech antennas are calibrated for horizontal installation at the top of the windshield. The cable that connects the antenna to the control module must be free from any pinches or kinks. Installing the antenna in areas other than the windshield may adversely affect the effective transmitting distance of the remotes.

FT-Shock

This is an analog dual stage impact sensor included with the CM900AS kit. The CM900As is default to accept the FT-shock and provides warn away and full trigger outputs. There is a dial located at the end of the egg shaped FT-shock with settings from “off” then 1-10 sensitivity level, 1 being the least sensitive and 10 being the most sensitive (10 will pick up the wind blowing (☺)). We recommend mounting the sensor with the plastic mounting strap included preferably as centered to the vehicle as possible. Due to its extreme sensitivity the vehicle plastic heater ducting makes for a good mounting surface.

LED (external)

There will be an external mountable Blue LED for theft deterrent included. It is important to discuss mounting locations with the end user, trying to make it visible and bright when recommending locations. The LED will light up solid blue when armed for approx. 25 seconds allowing the impact sensor to set up. Once the LED is flashing the sensors are ready. The LED will also provide security diagnostics:

2 Flash	Door Input
3 Flash	Shock stage 1
4 Flash	Shock stage 2
5 Flash	Tilt
6 Flash	Ignition on
7 Flash	Hood Input
8 Flash	Trunk Input
9 Flash	AUX sensor stage 1
10 Flash	AUX sensor stage 2

FT-DASII (Digital Adjustable Sensor gen II) (CM900AS only)

The DASII includes a dual stage impact sensor, and auto adjusting tilt sensor, and glass break sensor all in one. Follow the steps below to properly setup your DAS II sensor levels. You can view our programming/ demonstration video located in our video library at www.firstechdata.com.

NEW DAS-II Programming Procedure**

Installing Your DAS

NOTE 1: Make sure Option 4-12 is set to the DAS option.

NOTE 2: Connect cable to the red 4 pin port on the CM900AS.

NOTE 3: Mount DAS securely using zip ties or included hardware

Sensor can be mounted in any orientation, tilt will set 30 seconds after arming.

STEP 1: Turn the ignition to the ‘on’ position

STEP 2: Send Unlock command 2 times (unlock => unlock) using any Firstech remote or OEM remote (**capable of Controlling the CM7 through data module**) At this time the DAS-II display will initialize and stay powered up for at least 5 minutes or until ignition is off.

STEP 3: Push the programming button repeatedly until the desired sensor has been selected 1-5 shown in the table below. *(The programming button will be used to navigate the sensor adjustments and sensitivity once a sensor has been selected.)*

STEP 4: Once the sensor has been selected hold the programming button for 2 seconds to confirm selection and enter sensitivity adjustment. The adjustment options will now be accessible with default setting displayed. (sensitivity options will be shown in table below.)

STEP 5: push the programming button repeatedly until desired sensitivity level is reached (setting 0 will indicate sensor is OFF => except option 2 window break sensor conditions)

STEP 6: Hold programming button for 2 seconds to save sensitivity setting. After the setting is saved the sensor will start over at sensor 1 again. (if the programming button is not pressed within 5 seconds after setting the LED will flash 2 times save the setting and exit that sensor programming)

STEP 7: Turn ignition off to exit programming

STEP 8: You are now ready to test the DAS

	Feature	Button Press	Mode Display	Sensitivity Adjust				
1	Shock Level (Prewarn)	1 time						
			Red LED ON	OFF	High sensitivity	Default	Low sensitivity	
2	Window Break Sensing Condition	2 times		-				
			Red & Green LED ON	-	Sound Only	Default	Sound and Vibration	
3	Window Break Sound Sensitivity	3 times						
			Green LED ON	OFF	Low sensitivity	Default	High sensitivity	
4	Tilt	4 times						
			Red LED Flash	OFF	Low sensitivity	Default	High sensitivity	
5	Movement	5 times		-				
			Green LED Flash	-	Low sensitivity	Default	High sensitivity	

Optional DAS Shock Sensitivity setting Procedure (CM7000, *CM7200)

STEP 1: Turn the ignition to the 'on' position

STEP 2: Hold Foot Brake (make sure the CM sees a valid foot brake input)

STEP 3: Tap Lock 3 times from any Firstech remote (including 1Button remotes)

STEP 4: Release Foot Brake *Parking lights will flash 2 times confirming DAS is in programming mode

STEP 5: The CM will chirp/honk/flash (1-10 times) indicating the current sensitivity level

STEP 6: Using any Firstech remote, OEM remote (**capable of Controlling the CM900AS through data module**), or the Arm/Disarm analog **inputs**, tap lock or unlock 1 time to increase or decrease 1 level of sensitivity (up to 10 (least sensitive) or down to 1 (most sensitive)) which should be confirmed by chirps/horn honks/ flashes

**repeat this process until desired sensitivity level has been reached*

- a. Example 1. Current sensitivity level is 4, we send 1 lock we should receive 1 chirp or 1 horn honk after 1 second of no incoming commands
- b. Example 2. Current level is set at 4, we send lock + lock + lock, after 1 second of no incoming commands we should receive 3 chirps or horn honks
- c. Example 3. Current level is now set at 7, we send unlock + unlock, after 1 second of no incoming commands we should receive 2 chirps/horn honks/park light flashes

STEP 7: 5 seconds after the last setting change confirmation the CM will chirp/horn honk/flash the sensitivity level *you will have an additional 5 seconds to make any adjustments

STEP 8: Programming completed.

STEP 9: You are now ready to test the DAS

Siren

We include the standard 6 tone mini siren with every remote start security (**CM900AS**) kit. We also offer 2 additional siren options 1. Mini Piezo (pain generator) 2. Battery backup siren with key. We have a variety of siren feature options including length of output time, chirp output timing (i.e. when locking, unlocking, or starting) so please make sure to set features 3-02 and 3-09 (**CM900AS only**) to desired options.

Thermistor (Temperature Sensor)

Every 2 Way LCD Firstech RF kit includes an optional thermistor, which must be plugged into the blue 2 pin port of the CM900 in order to use properly. The use of the thermistor allows the 2 Way LCD remote to display the vehicle's interior temperature on screen or the status page of your Drone mobile phone App. The thermistor will also allow for the vehicle to start with timed hot or Cold starting; see features 2-05, 2-07 and 2-08 for the different options. We also offer temperature based Defrost options to activate the output automatically Feature 3-13 and 3-14

Hood Pin

The hood pin switch triggers the alarm in the event the hood is opened while the alarm is armed. The hood pin doubles as an important safety feature that prevents the remote start from engaging while the hood is open.

Common Procedures



High Current Relay and Jumper settings

Caution: Jumper settings affect the polarity and use of certain outputs. If these jumpers are used incorrectly, damage to the vehicle and /or control module may occur.

Blue IGN 2 output wire: Jumper 2 (2nd Ignition / 2nd Starter / 2nd ACC)

Jumper 2 sets the behavior of the large blue wire on Connector 1. This wire is powered by an internal relay in the control module. In the default position the jumper is set to 2nd Ignition. 2nd Ignition is common on GM and Toyota vehicles and will need to be powered. You can change the behavior of the wire to act as a 2nd Starter or 2nd Parking light to power up those wires common on newer Toyotas and Nissans.

Green/White PRK Light output wire: Feature 1-06 (Parking Light, 2nd Starter, or (+) Trunk Release)

Determines the output (not polarity) of the green/white wire on connector one (CN1). In the default position it provides a positive (+) parking light output. Additional settings (including Positive (+) 2nd Starter, or positive (+) trunk output) can be selected by changing feature 1-06 options.

Setting Auxiliary Outputs on Connector 2

You Must Have the OP500 Option Programmer

Setting auxiliary outputs on the control module involves the Programmable Output Connector wires (POCs). Choose two POC wires that you are not using on I/O connector. For example, we will use POC 6 and POC 7.

STEP 1: Plug in OP500 and use the Right or Left Arrow Button to scroll through the menu to POC 6 or POC 7 on LCD Line 1.

STEP 2: Use the Up or Down Arrow Button to change the lower number on LCD Line 2 to 10 – Auxiliary 1 or 11- Auxiliary 2.

STEP 3: Scroll up the menu to Option 4-01 and 4-02 and set the options. Please see the Option Table for details.

STEP 4: Our control modules have a secure auxiliary option 4-05. This requires you to tap the Start Button before you tap the Trunk Button for Aux 1 or Hold Trunk + Start for 2.5 and then tap Trunk for Aux 2. On 1-Way remotes you must hold the Trunk and Start Buttons for 2.5 seconds then tap the Trunk Button for Aux 1 or the Start Button for Aux 2. ***There are 2 other options for this security override feature, please see feature table and descriptions for each option***

STEP 5: If you need to change the time settings of the outputs, scroll down to AU1 or AU2 on the OP500. LCD Line 2 is the timed output. **Note: with an OP500 update v.31 (www.firstechdata.com) you will now be able to allow for timed AUX outputs of up to 15 minutes.**

STEP 6: Hold the “W” Write button for 3 seconds to save all the changes.

Tach Sensing

The default engine sensing mode is tachless (voltage sense). In cold weather climates we recommend using Tach sense for more reliable and consistent starting. The CM900 can be switched to tach mode automatically by performing the following steps. **Firstech recommends using a digital multimeter when testing for tach.**

STEP 1: Test wire and make connection. At idle, the tach wire should test between 1 to 4 Volts AC. As the vehicle RPM's increase the voltage on the meter will also increase. Always make a wire to wire connection for tach when hardwiring.

STEP 2: Start the vehicle with the key. Allow time for the engine to idle down. (If you do not want to wait for the vehicle to idle down, you can shift the vehicle into reverse while holding your foot on the brake.).

STEP 3: Learn tach: Activate the remote start sequence by holding the Start Button for 3 seconds. The parking lights will flash once, and the siren will chirp once to confirm a good tach signal. If the parking lights flash 2 times and the sirens chirps twice, this

Number of Parking Light Flashes	Tach Error
1	Option 2-10 is not in Tach setting
2	Key is in the off position
3	Bad tach signal. Find a different wire.

would indicate the tach did not learn. A few seconds after the 2 flashes, the CM900 will flash parking lights to indicate the tach learn error.

NEW “EZ TACH” programming procedure

STEP 1: Hold the foot brake (must be held down before vehicle is on)

STEP 2: Start the vehicle (with foot brake still held down)

STEP 3: Wait 30 seconds (with foot brake still held down) for the CM to capture the engine running tach signal. The CM will flash the parking lights 1 time after 30 seconds to indicate it has captured a good tach or engine running signal. If there is no or poor signal the CM will flash the standard tach programming diagnostics as shown above.

STEP 4: Programming complete **(This procedure will be disabled after the first time but can be enabled with a main control module power cycle)**

Alternator Sensing

Alternator sensing is another method the remote start can utilize to determine if the engine is running. This is different than the tachless mode and a wire to wire connection must be made.

STEP 1: Change Option 2-10 to setting 3 - Alternator sensing.

STEP 2: Test wire and make connection. The stator wire is found at the vehicle's alternator. Change your multimeter to DC voltage before testing for this wire.

- A. At rest, with the ignition off, the stator wire should test 0V DC.
- B. Turn the ignition to the run position. The stator wire should now test between 4 – 6V DC.
- C. Start the vehicle with the key. The stator wire should now test between 12 – 14V DC at idle.

STEP 3: Process complete – no further programming is required.

Tachless Mode – (Automatic Transmission Vehicles Only default setting for CM900S/AS)

Tachless sensing is an alternative engine sensing mode. It does not require a connection to the vehicle other than the main ignition harness. **Note: due to the delayed peak charging found with most late model computer controlled alternators, this feature may not be reliable.**

STEP 1: Set Option 2-10 to setting 1 – Tachless Mode.

STEP 2: Process complete – there is no further programming required other than adjusting crank time when necessary (see below).

Adjusting Crank Time: To adjust minimum crank times, refer to Option 2-12. To help ensure successful starting, the system will automatically add additional crank time to the 2nd and 3rd start attempts. In addition, there is a built in “Smart Resting Mode”. Traditional tach sensing is still highly recommended for colder climates.

Timed Crank Setting – Automatic Transmissions Only

Option 2-10 setting 4 provides a timed 3 second crank for the remote start sequence. This option just cranks the vehicle for 3 seconds and assumes remote start has completed. This option can be used for GM and other vehicles with built in anti-grind systems.

Advanced Tachless

Advanced Tachless is a no connection feature (2-11 option 2) that can be used as a more reliable “tachless” or no wire connection option. In order for this feature work the no connection feature (2-10 option 1) must be selected and no tach signal input on the main control module should be present.

Assumed Timed Crank

Assumed Time Crank is the last feature of Option 2-10 for remote starting. This is intended for vehicles with built-in anti-grind feature or vehicles that do not have a 12V Positive starter wire at the ignition harness. This option will send a 3.0 second crank signal to the vehicle. This option can be used on vehicles with built in anti-grind systems or Push To Start (PTS) systems.

Wiring Descriptions

Connector 1 (CN1), 8-Pin **(NOTE: Please see FT-LC1 for a low current version of CN1)**

Pin 1 **Red** - Constant 12V positive (+) power input. (*this input provides power to the CM processor, Ignition 1, and accessory ports*) This wire must be connected. The proper vehicle wire will test (+) 12V at all times, even when the key is in the off position, on position, and during crank.


Pin 2 **Green/White - Programmable Output:** This positive (+) parking light wire triggers when you lock, unlock, remote start, or during troubleshooting diagnostics. **Note: This output is programmable and can provide a 2nd starter or (+) trunk release output. This is achieved using Jumpers located under the access door on top of the control module.**

Pin 3 **Red/White** - Constant 12V positive (+) power input. This wire must be connected (*this input provides power for the accessory, starter, and parking light output*). The proper vehicle wire will test (+) 12V at all times - while the key is in the off position, the on position and during crank.

Pin 4 **White - High Current Output:** Accessory 12V positive (+) output (**default**). This wire must be connected to the vehicle accessory / HVAC blower motor wire. The proper wire will test 0V with the key in the off position, (+) 12V while key is in the on position, 0V while cranking and back to (+) 12V when the key is returned to the on position.

Pin 5 **Blue - Programmable Output:** Positive 12V (+) output that powers up during remote start. This output is programmable to provide a (+) 2nd ignition (**default jumper setting**), (+) 2nd Starter, or (+) Accessory output using the jumpers located under the access door on top of the control module.

Pin 6 **Yellow** - Starter 12V positive (+) output. This wire must be connected for remote start. The proper wire will test 0V with the key in the off position, 0V while the key is in the on position and (+) 12V during crank. **Note: You can use the FT-ELOCK for starter kill and anti-grind features. It can be used to configure the starter interrupt in various ways. We provide a GWA (Ground When Armed) output for standard starter interrupt .**

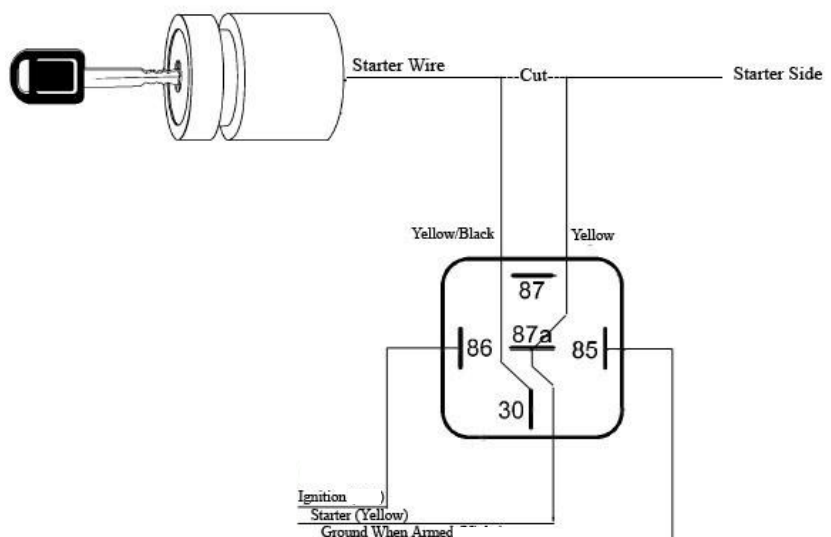

Pin 7 **Green** - Ignition 12V positive (+) output and input. This wire must be connected to the vehicle's ignition for remote start and valet / remote programming. The proper wire will test 0V with the key in the off position, 12 V (+) while the key is in the on position and 12V (+) during crank.

Pin 8 **Black** - Ground negative (-) input. This wire must be connected to the vehicle's chassis ground. Make sure no paint or rust is on the mounting surface. **We recommend connecting this wire first.** IF you're having trouble locating a good ground source you can use PIN # 4 at the Standard OBD II connection

Connector 2 (CN2), Black 20-Pin: Blade Connector

This connector is used only if you are installing a Blade-AL or Blade-TB. The wiring harness for this connector only comes with the Blade cartridge. Please refer to the Blade install guide for wire description <http://compustar.idatalink.com>.

Connector 3 (CN3) **CM900AS**, Grey 18-Pin: Input/Output harness (I/O harness)

IMPORTANT: Pins 1-7 are programmable for up to 19 different output types. Refer to Special Option Group 2 for complete details. **Note: These inputs/outputs are subject to change, for the latest software update and feature table please visit compustar.idatalink.com or www.firstechdata.com**

Pin 1 **Green/White** - (fixed output) Parking light 250mA negative (-) output. This will provide output whenever the parking lights are activated for lock, unlock, remote start, diagnostics, and programming the proper wire in the vehicle will test (-) when the parking light switch is in the on position.

Note: There are 18 additional POC setting options for this POC.

Pin 2 **Blue/Lt. Green** - [POC 2] Lock 250mA, 800mS (-) negative output: This is an optional output that will provide only negative (-) output pulse for locking doors. System will lock doors and arm alarm.

IMPORTANT: You must reverse polarity for (+) trigger door lock systems using the FT-DM700, FT- DM600 or relays. For additional lock settings review Option Group 1.

Note: There are 18 additional POC setting options for this POC

Pin 3 **Blue** - [POC 3] Unlock 250mA, 800mS (-) negative output: This is an optional output that will provide only a negative (-) output pulse for unlocking doors. System will unlock doors and disarm alarm. **IMPORTANT:** You must reverse polarity for (+) trigger door lock systems using the FT-DM700, FT- DM600 or relays. For additional lock settings review Option Group 1.

Note: There are 18 additional POC setting options for this POC

Pin 4 **Black** - [POC 4] Status/Ground while running (GWR) 250mA latched negative (-) output: This is an optional output that will provide a latched negative (-) output 250mS before the ignition turns on, stays on throughout the remote start duration and will be the last to shut off. This wire is most commonly used to trigger bypass / transponder modules. **Note: There are 18 additional POC setting options for this POC**

Pin 5 **Orange** - [POC 5] Factory Alarm Arm (FAA) 250mA, 800mS negative (-) output: This is an optional output that will provide a (-) pulse during lock, after crank and again after the remote start shuts down. The FAA output timing can be configured using feature 1-05.

Note: There are 18 additional POC setting options for this POC

- Pin 6 **Orange/White** - [POC 6] Factory Alarm Disarm (FAD) 250mA, 800mS negative (-) output: This output will provide a (-) pulse during unlock and every time prior to the GWR (ground when running: aka. Status output) turning on during the remote start sequence. It is typically used to disarm factory security systems. **Note: There are 18 additional POC setting options for this POC**
- Pin 7 **White** - [POC 7] Horn:250mA negative (-) output. This is an optional output that will provide a fixed 30mS negative output when triggered by the remote(s). The output control is based on feature 3-08 option setting. **Note: There are 18 additional POC setting options for this POC**
- Pin 8 **Gray/Black** - Hood Pin negative (-) (default setting) input: This input is a safety shut down and alarm trigger. It prevents the vehicle from remote starting while the hood is open and triggers the alarm if the hood is opened while the alarm is armed. You can connect this wire to the hood pin supplied with this kit, or to a wire in the vehicle that shows (-) only while the hood is open.
- Pin 9 **Light Blue/White** - Brake 12V positive (+) input: This wire must be connected as it provides a shut down for the remote start. It is also required to enter and exit Valet Mode. The proper wire will test (+) 12V while the foot brake is pressed.
- Pin 10 **Pink/Black** - Trigger start (-) input: This wire can be used to activate/deactivate the remote start sequence when it receives a ground pulse based on feature 2-04 option setting 1, 2, or 3 pulses.
- Pin 11 **Pink** - Positive (+) input: Trigger start which will activate/deactivate the remote start sequence when it receives a positive or B+ pulse based on feature 2-04 option setting 1, 2, or 3 pulses is the default setting. This can be done with a door lock motor output being operated by a factory keyless entry or another external source. **There are additional options for this Input please check feature 4-10**
- Pin 12 **Yellow/Black** - Engine sensing input (A/C): This wire is connected to the vehicle's Tach or Alternator wire and is required when using the tach and alternator sense setting. (You can also connect this wire to the battery (+) post when using voltage sense to make it more accurate) **IMPORTANT: To change engine-sensing modes, you must change Option 2-10. *Tach programming procedure can be found on page 13.***
- Pin 13 **Light Blue** - Turbo Timer / Parking / Emergency brake (default setting) negative This input is required for Turbo Timer mode. The proper e-brake wire will provide a (-) trigger when parking / emergency brake is set, and the key is in the ignition or "on" position.
- Pin 14 **Violet/Black** - Trunk zone input: This is an optional input that will monitor when the vehicle's trunk has been opened. The proper wire will provide a (-) trigger while the trunk is open.
- Pin 15 **Red** - Door zone input (+): This wire monitors positive (+) trigger door-pins for security and turbo timer purposes. The proper wire in the vehicle, will provide a (+) trigger only when the doors are opened. You will need to test the wire for correct polarity.

Pin 16 **Red/White** - Door zone input (-): This wire monitors negative (-) trigger door-pins for security and turbo timer purposes the proper wire in the vehicle, will provide a negative (-) trigger only when the doors are opened. You will need to test the wire for correct polarity.

Pin 17 **Brown** - Siren: 600mA (+) output can be connected to the positive lead of an aftermarket siren. This will produce output with arm/disarm, full alarm, and panic as a default setting. This can be changed based on feature 3-09 option settings. The length of output for the arm/disarm chirps can be changed using feature 3-02 settings.

Pin 18 **Blue/white** - Starter Kill: 250mA latched negative (-) output when armed and during remote start (while running) that can be used with an FT E-LOCK to interrupt a starter wire protecting from theft or grinding the starter during take over. Caution: If this wire is being used to trigger multiple aftermarket accessories it must be diode isolated for each one.

Connector 3 (CN3) **CM900S** White 12 pin Input/Output harness (I/O harness)

Pin 1 **Green/White** - (fixed output) Parking light 250mA negative (-) output. This will provide output whenever the parking lights are activated for lock, unlock, remote start, diagnostics, and programming the proper wire in the vehicle will test (-) when the parking light switch is in the on position.

Note: There are 18 additional POC setting options for this POC.

Pin 2 **Blue/Lt. Green** - [POC 2] Lock 250mA, 800mS (-) negative output: This is an optional output that will provide only negative (-) output pulse for locking doors. System will lock doors and arm alarm.

IMPORTANT: You must reverse polarity for (+) trigger door lock systems using the FT-DM700, FT- DM600 or relays. For additional lock settings review Option Group 1.

Note: There are 18 additional POC setting options for this POC

Pin 3 **Blue** - [POC 3] Unlock 250mA, 800mS (-) negative output: This is an optional output that will provide only a negative (-) output pulse for unlocking doors. System will unlock doors and disarm alarm. **IMPORTANT:** You must reverse polarity for (+) trigger door lock systems using the FT-DM700, FT- DM600 or relays. For additional lock settings review Option Group 1.

Note: There are 18 additional POC setting options for this POC

Pin 4 **Black** - [POC 4] Status/Ground while running (GWR) 250mA latched negative (-) output: This is an optional output that will provide a latched negative (-) output 250mS before the ignition turns on, stays on throughout the remote start duration and will be the last to shut off. This wire is most commonly used to trigger bypass / transponder modules. **Note: There are 18 additional POC setting options for this POC**

Pin 5 **Orange** - [POC 5] Factory Alarm Arm (FAA) 250mA, 800mS negative (-) output: This is an optional output that will provide a (-) pulse during lock, after crank and again after the remote start shuts down. The FAA output timing can be configured using feature 1-05.

Note: There are 18 additional POC setting options for this POC

- Pin 6 **Orange/White** - [POC 6] Factory Alarm Disarm (FAD) 250mA, 800mS negative (-) output: This output will provide a (-) pulse during unlock and every time prior to the GWR (ground when running: aka. Status output) turning on during the remote start sequence. It is typically used to disarm factory security systems. **Note: There are 18 additional POC setting options for this POC**
- Pin 7 **White** - [POC 7] Horn:250mA negative (-) output. This is an optional output that will provide a fixed 30mS negative output when triggered by the remote(s). The output control is based on feature 3-08 option setting. **Note: There are 18 additional POC setting options for this POC**
- Pin 8 **Gray/Black** - Hood Pin negative (-) (default setting) input: This input is a safety shut down and alarm trigger. It prevents the vehicle from remote starting while the hood is open and triggers the alarm if the hood is opened while the alarm is armed. You can connect this wire to the hood pin supplied with this kit, or to a wire in the vehicle that shows (-) only while the hood is open.
- Pin 9 **Light Blue/White** - Brake 12V positive (+) input: This wire must be connected as it provides a shut down for the remote start. It is also required to enter and exit Valet Mode. The proper wire will test (+) 12V while the foot brake is pressed.
- Pin 10 **RED/White** - Trigger start (-) input: This wire can be used to activate/deactivate the remote start sequence when it receives a ground pulse based on feature 2-04 option setting 1, 2, or 3 pulses.
- Pin 11 **RED** - Positive (+) input: Trigger start which will activate/deactivate the remote start sequence when it receives a positive or B+ pulse based on feature 2-04 option setting 1, 2, or 3 pulses is the default setting. This can be done with a door lock motor output being operated by a factory keyless entry or another external source. **There are additional options for this Input please check feature 4-10**
- Pin 12 **Yellow/Black** - Engine sensing input (A/C): This wire is connected to the vehicle's Tach or Alternator wire and is required when using the tach and alternator sense setting. (You can also connect this wire to the battery (+) post when using voltage sense to make it more accurate) **IMPORTANT: To change engine-sensing modes, you must change Option 2-10. *Tach programming procedure can be found on page 13.***
- Connector 4 (CN4), 6-Pin Note: This harness is not included with CM7 wire harness kits. The Lock (POC 2), Unlock (POC 3), Trunk release outputs have been moved to CN3 I/O harness and are programmable outputs. This connector will still be available for any Firstech lock harness. (FT-DM600 or FT-DM700)**
- Pin 1 None - 12v B+ constant output: available when using a Firstech door lock Module DM600, DM700
- Pin 2 **Violet/White** - Trunk release 250mA, 800mS negative (-) output: This is an optional output that will release the trunk. Use CN1, Pin 2 if the vehicle is equipped with a (+) trunk release. System will unlock doors and disarm alarm prior to trunk release.
- Pin 3 **Orange/Black** - 2nd Unlock 250mA, 800mS negative (-) output: This is an optional output that will provide a (-) pulse for driver's priority door lock. **IMPORTANT: You must isolate the driver's door and set feature 1-03 to option 2 (on).**

Pin 4 **Blue** - Unlock 250mA, 800mS negative (-) output: This is an optional output that will provide a (-) pulse for unlocking doors. System will unlock doors and disarm alarm. **IMPORTANT:** You must reverse polarity for (+) trigger door lock systems. For additional lock settings review Option Group 1.

Pin 5 **Blue/Black** - Lock 250mA, 800mS (-) negative output: This is an optional output that will provide a (-) pulse for locking doors. System will lock doors and arm alarm. **IMPORTANT:** You must reverse polarity for (+) trigger door lock systems. For additional lock settings review Option Group 1. Pin 6 not used.

Pin 6 None - B- ground output: available when using a Firstech door lock Module FT-DM600, FT-DM700

Connector 5 (CN5), Grey 4 Pin (UART data port) Drone/Fortin data to data only

Pin 1 (**B+**) - Constant 12V positive (+) output

Pin 2 (**B-**) - Ground (-) output

Pin 3 (**RX**) - Input, this wire receives data

Pin 4 (**TX**) - Output, this wire transmits data

Connector 6 (CN6), Black 4-Pin (RS 232 Data Port) ADS/Drone data to data

This connector is used for updating control modules via www.firstechdata.com. You must also use this port to flash Blade bypass modules. This port provides simple connectivity of DroneMobile and iDatalink bypass modules.

This port can also be used to communicate with DroneMobile controllers.

Pin 1 (**B+**) - Constant 12V positive (+) output

Pin 2 (**B-**) - Ground (-) output

Pin 3 (**RX**) - Input, this wire receives data

Pin 4 (**TX**) - Output, this wire transmits data

Connector 7 (CN7), 2-Pin (Pre-wired Thermistor)

Plug optional thermistor into this connector to monitor the vehicle's temperature. It used in conjunction with Timer Start features along with displaying temperature on two-way LCD's. To use Timer, Start features review feature Group 2, and defrost features in feature group 3

Pin 1 **Black** - Thermistor

Pin 2 **Black/White** - Thermistor

Connector 8 (CN8), 4-Pin to 4-Pin or 6-Pin (Pre-wired Antenna Cable)

Connect your antenna cable to this port. You can only use 4 to 4 pins or 4 to 6 pin antenna cables. 6 to 6 Pin antenna cables do not work. Do not use both Connector 9 and Connector 10 at the same time. Pin 1

Yellow - RX input. This wire receives the signal from remote.

Pin 2 White - TX output. This wire transmits the signal to remote.

Pin 3 Red - Constant 12V positive (+) output.

Pin 4 Black - Ground

Connector 9 CM900AS ONLY (CN9), 2-Pin (Pre-wired LED) **WHITE connector Note: Do not mistake for Thermistor port. Note: The LED will stay solid blue when armed for the duration of the sensor set up time. (Approx. 25 seconds)

Pin 1 **Black** - L.E.D negative (-) ground.

Pin 2 **Black/White**- L.E.D. 2.5V positive (+) output.

Connector 10 CM900AS ONLY (CN10), 4-Pin (Pre-wired FT Shock Sensor)

Pin 1 **Black** - Negative (-) ground when armed (GWA).

Pin 2 **White** - 2nd stage negative (-) input. (Instant trigger)

Pin 3 **Red** - 12V positive (+) output.

Pin 4 **Yellow** - 1st stage negative (-) input. (Warn away)

Feature Programming Tables

#1	Feature	Feature Group 1			
		Default(I)	Option (II)	Option (III)	Option (IV)
1-1	Unlock before, Lock after, starting.	Off	On	Lock After Start Only	Lock After Shutdown Only
1-2	Lock / Unlock pulse duration.	0.8 sec	2.5 sec	0.125 sec	3.5 sec
1-3	Driver's priority unlock	Off	On		
1-4	Double pulse unlock.	Off	Unlock	Lock	Both Lock and Unlock
1-5	Rearm Output	1st Lock, After Start, and After Shutdown	1st Lock, After Shutdown	After Start Only	After Shutdown Only
1-6	Parking light High Current Relay	(+) Parking Light Output 10A Max	(+) Starter Output 10A Max	(+) Trunk Release 10A Max	
1-7	Unlock / Disarm With Trunk Release	Unlock, Factory Disarm, and Trunk Release	Factory Disarm, Trunk Release Only	Trunk Release Only	
1-8	Locking while in Passive Arming	Off	Passive locking w/ Passive Arming	No Passive Locking w/ Passive Arming	
1-9	Ignition controlled door locks	Off	On	RPM Locks (Tach Sensing Mode Only)	
1-10	Auto Relock (If a door is not opened within this amount of time.)	Off	30 sec	60 sec	5 min
1-11	Ignition / Accessory Out Upon Unlock	Off	Ignition Pulse-same timing as disarm pulse	Acc Pulse-same timing as disarm pulse	Ig and Acc Pulse-same timing as disarm pulse
1-12	Arm/Disarm Remote Paging by Datalink Module	On	Off		
1-13	Double pulse Disarm	Standard	Double Pulse		
1-15	Trunk Output Timing	1sec	2 sec	3 sec	4 sec
1-16	Siren/Horn Mute Control on Remote	Disabled	Enabled	Silent Alarm	

#2	Feature	Feature Group 2			
		Default(I)	Option (II)	Option (III)	Option (IV)
2-1	Tach Sensing Type	Optimal Tach Threshold	Previous Tach Method		
2-2	Turbo mode. CM900AS ONLY	Off	2 Min	1Min	4 Min
2-3	Diesel timer.	Off	3~99 sec (12sec Default)	7 sec	GM Ignition Delay
2-4	Trigger Start	Off	Single Pulse	Double Pulse	Triple Pulse
2-5	Cold or Hot Start with Thermistor Assembly	Off	Cold start only	Hot start only	Cold and Hot start
2-6	Timer Start, or, Minimum Interval Between Cold Starts	3 Hour (4-minute runtime, double for Diesel)	2 Hour Repeat with Cold Starting of 2-8 (Runtime 2-7)	Reservation (Runtime 2-7)	24 Hour Repeat with Cold Starting 2-8 (Runtime 2-7)
2-7	Remote Start Runtime	15 Min	25 Min	45 Min	PROG. 3 ~ 45 mins 3 min (default)
2-8	Temperature of Cold Starting	-10°C / 14°F	-20°C / -4°F	-5°C / 23°F	PROG. -30°C ~ 0°C / - 22°F ~ 32°F (-15°C / 5°F default)
2-9	Temperature of Hot Starting	25°C / 77°F	30°C / 86°F	35°C / 95°F	PROG. 20°C ~ 40°C / 68°F ~ 104°F (40°C / 104°F default)
2-10	Engine Sensing	Tachless NO connection	Tach	Alternator	No Connection (3.0sec Start -Assume Running, Automatic Transmission only)
2-11	Advanced Tachless	Off	On		
2-12	Min. Crank Time	Standard	+0.2 Seconds to Crank Time	+0.6 Sec to Crank Time	Standard – MIN(0.2sec)
2-13	Timer Mode	Off	On		
2-14	Turbo "set with" CM900AS ONLY	(Parking Brake) is set	(Parking Brake): set + Hold start button for 2.5 sec	(Parking Brake): set Release (within 7 seconds) set	
2-15	Turbo "Start Timer" CM900AS ONLY	Last door closed (locks before shut down)	Last door closed + Lock command	10 Seconds After the Last Door is Closed or Lock Command	Last door is closed (Locks after shut down)
2-16	Shutdown by Door Open after Remote Start CM900AS ONLY	Off	On		

#3	Feature	Feature Group 3			
		Default(I)	Option (II)	Option (III)	Option (IV)
3-1	Parking lights Control	Constant Output While Remote Started	Flashing Output While Remote Started	Off While Remote Started	Off While Lock and Unlock Only
3-2	Confirmation Chirps	Medium (30mS)	Short (15mS)	Normal (60mS)	
3-3	Dome Light Delay CM900AS ONLY	Off	5 sec	45 sec	Auto
3-4	Starter-Kill relay.	Anti-Grind + Starter Kill	Anti-Grind	Anti-Grind + Passive Starter Kill	
3-7	Siren Duration (Upon Alarm Trigger)	30 sec	60 sec	120 Sec	Chirps for 20 seconds
3-8	Horn Output	On Double Lock Only	On Lock and Unlock	On Lock, Unlock, and Start	On Double Lock and Start
3-9	SIREN Output CM900AS ONLY	On Lock, Unlock, and Start	On Double Lock Only	On Lock and Unlock	On Double Lock and Start
3-10	Valet	Key 5 times with Foot Brake Trigger or Remote (Lock + Trunk) while Ignition is On	Key 5 times with Foot Brake Trigger or Remote (Lock + Trunk)		
3-13	Defroster Temperature Control	Standard	Only below 32 degrees F	PROG 0°C/32°F ~ 13°C/55°F below 6°C/42°F default	AUX 1
3-14	Defroster Output Timing	0.5 sec pulse	3 min latch	7 min latch	Constant Output Until Remote Start Shuts Down
3-15	Soft Disarm	Off	On	Disarm 1 Press	

#4	Feature	Feature Group 4			
		Default(I)	Option (II)	Option (III)	Option (IV)
4-1	Aux 1 output	0.5sec	Latch	0.5 sec Pulse + Program	Program
4-2	Aux 2 output	0.5sec	Latch	0.5 sec Pulse + Program	Program
4-3	Aux 1 output Control	By Remote	Arm	Disarm	
4-4	Aux 2 output Control	By Remote	Arm	Start	
4-5	Secure Aux Output (1 and 2 Only)	On	Off	On While Armed	
4-8	Aux 1 and Aux 2 Control for iDatalink Modules (Sliding Doors)	Off	Unlock, Factory Disarm, and Sliding Door Control	Factory Disarm and Sliding Door Control Only	
4-10	(+/-) Trigger Start Input	Trigger Start input	Ignition input	keysense input	Glow Plug Input
4-11	DroneMobile or Fortin on 2nd RS232 Port (Grey Plug)	DR-2000 (Grey 4Pin)	Fortin (Grey 4Pin)		
4-12	Impact Sensor CM900AS ONLY	Shock Sensor	DAS Sensor	1st Stage Disarm Input 2nd Stage Double Arm Input	1st Stage Disarm Input 2nd Stage Arm Input
4-14	Low Battery Warning	OFF	ON (at 11.7 Volts)	Low Battery Start (11.7 V)	

S-#1	Feature	Setting Value
1	Diesel timer	3 ~ 99 [seconds]
2	AUX1 output time	1 ~ 99 [seconds], LA(Latch), 1~15 [minutes]
3	AUX2 output time	1 ~ 99 [seconds], LA(Latch), 1~15 [minutes]
4	Cold Start Temperature	-30 ~ 0 [°C] / -22 ~ 32 [°F]
5	Hot Start Temperature	20 ~ 40 [°C] / 68 ~ 104 [°F]
6	Defroster Temperature	0 ~ 13 [°C] / 32 ~ 55 [°F]

S-#2	Feature	Special Option Group 2 Setting Value			
	Programmable Output Channel	Optional			
1	POC #1 (Default: Light)	2nd LIGHT [1]	HORN [8]	Lock [25]	
2	POC #2 (Default: Lock)	2nd START [2]	DOME LIGHT [9]	Unlock [26]	
3	POC #3 (Default: Unlock)	2nd IG1 [3]	Aux1 [10]	Priority Unlock [27]	
4	POC #4 (Default: Status)	2nd ACC [4]	Aux2 [11]	Trunk Release [28]	
5	POC #5 (Default: Rearm)	STATUS [5]	Defrost [17]	Starter Kill [29]	
6	POC #6 (Default: Disarm)	REARM [6]	GWA [18]		
7	POC #7 (Default: Horn)	DISARM [7]	Defrost-2 [21]		

Feature Option Descriptions

FO = Feature Option

1-01 Unlock before, Lock after:

FO1 - Off

FO2 - On: Sends an unlock command as soon as the remote start sequence is triggered then send a relock command as soon as the CM7 has confirmed remote start success.

FO3 - Lock after start only: Sends a lock command after the CM7 has confirmed remote start success.

FO4 - Lock after shutdown only: will send a lock command only after the CM7 has successfully shut down. *Note: It will not provide an output if the CM7 is shut down with an emergency override input. (i.e. hood pin, or foot brake input)*

1-02 Door Lock/Unlock output Pulse Duration: This does not affect the behavior of the factory arm output (orange wire) or factory alarm disarm output (orange/white wire).

FO1 - 0.8 seconds: (-) Negative lock and unlock output time.

FO2 - 2.5 seconds: (-) Negative lock and unlock output time.

FO3 - 0.125 seconds: (-) Negative lock and unlock output time. This option may be helpful when using lock/unlock to arm/disarm vehicles that may roll windows down with factory Arm/Disarm wires when the standard output is too long.

FO4- 3.5 seconds: (-) Negative lock and unlock output time.

1-03 Driver's Priority Unlock:

FO1 - Off: (default)

FO2 - On: This feature will allow the user to unlock the driver's door first. If the unlock button is pressed again within 4 seconds, the other doors will unlock. The driver's door unlock must be isolated from the other doors and use the blue (-) unlock. The Orange/Black (-) 2nd unlock (POC setting) is used to provide unlock output to unlock all other doors.

1-04 Double Pulse Unlock:

FO1 - Off: (default)

FO2 - Unlock: This option will provide a double pulse output **only for** unlock each time the CM900 executes the unlock command. (Length of output time will be based on feature 1-02 option settings.)

FO3 - Lock: This option will provide a double pulse lock output **only for** lock each time the CM900 executes the lock command. (Length of output time will be based on feature 1-02 option settings.)

FO4 - Lock and unlock: This option will provide a double pulse lock output for both lock and unlock each time the CM900 executes lock or unlock commands. (Length of output time will be based on feature 1-02 option settings.)

1-05 Rearm Output:Factory Alarm Arm (FAA) output function options

FO1 - After start, after shutdown, after first lock: This option triggers the FAA after every successful remote start, every successful remote start shut down, and with every first lock command. (First lock command is the first arm/lock command sent after the CM900 has been disarmed or unlocked.)

FO2 - After shut down only and first lock: This option triggers the FAA after every successful remote start shut down, and with every first lock command. (First lock command is the first arm/lock command sent after the CM7 has been disarmed or unlocked.)

FO3 - After Start only: This option triggers FAA after every successful remote start.

FO4 - After shutdown only: This option triggers the FAA after every successful remote start shut down.

1-06 Parking Light Relay Output: High Current Onboard Relay that can be programmed to provide positive (+) output based on the option selected. The default setting is Parking Light

FO1- Parking Light Output: This option will produce a positive output with remote programming, tach programming, trunk release function, Lock/Arm Unlock/disarm, during remote start, full alarm/panic, and while reporting diagnostics. *This output will be disabled while in Valet mode.*

FO2 – Starter 2 (+) Output: This option will produce a high current (+) starter 2 output (with the same timing as starter 1) during the crank procedure.

FO3 – Trunk release (+) Output: This option will produce a high current (+) output when the trunk release command is received.

1-07 Unlock / Disarm with Trunk Release:

FO1 - Unlock, Factory Alarm Disarm (FAD) trunk release: This option will send unlock and FAD outputs prior to sending the Trunk release output. This applies to analog and data to data situations.

FO2 - Factory Alarm Disarm (FAD) with trunk release: This option will send the FAD output prior to sending the trunk release output. This applies to analog and data to data situations.

FO3 - Trunk release only: This option will only send the trunk release output when triggered. This applies to analog and data to data situations.

1-08 Passive Mode: CM900AS ONLY When options 2 or 3 are selected the user has the choice to activate “Passive arming” feature using a Firstech remote or Drone (*please check specific remote user ’s manual for steps to activate passive*)

FO1 - Off: (default)

FO2 - Passive locking with passive arming: This option, when passive is activated will send lock/arm outputs to lock/arm the CM900AS 30 seconds after the last zone is closed. The CM900AS will flash the parking lights and chirp the siren 1 time every 10 seconds 3 times total as a warning that it is going to Arm/lock itself.

FO3 - No lock output with Passive arm: This option, when passive arm feature is activated, will **NOT** send the **lock command** one the CM900AS has passively armed itself. The CM900AS will flash the parking lights and chirp the siren 1 time every 10 seconds 3 times total as a warning that it is going to arm itself.

1-09 Ignition Controlled Locks (DRIVE LOCK): When FO 2-4 are selected, the user can activate the “drive lock” or ignition-controlled door locking feature using a Firstech remote or Drone. (*Please check specific remote user ’s manual for steps to activate Drive lock.*)

FO1 - Off: (default)

FO2 - On: This option (*when activated with the Firstech remote or Drone*) will provide a door lock output when the foot brake is applied, or 12 Volts is applied to the foot brake input on the CM900.

The CM900AS will also provide a door unlock output as soon as the key is turned off or **the parking brake is set (must have parking brake input connected or provide parking brake input from data module)**

FO3 - RPM locking: (*Tach input is required for this option to operate properly.*) This option will provide a door lock output at approximately 20% RPM over the programmed idle tach output. (i.e. program tach at 1000 rpm and doors will lock at a sustained 1200 rpm when moving.) The CM900AS will also provide a door unlock output as soon as the key is turned off or **the parking brake is set (must have parking brake input connected or provide parking brake input from data module)**

1-10 Auto Relock: **CM900AS ONLY** This Feature allows the CM900AS to relock the doors automatically if the CM has been unlocked/disarmed but none of the input zones are opened.

FO1 - Off: (default)

FO2 - 30 seconds: This option allows the CM900AS to automatically relock/rearm 30 seconds after CM7 has been disarmed/unlocked. This will only happen if no zones have not been opened.

FO3 - 60 seconds: This option allows the CM900AS to automatically relock/rearm 60 seconds after CM7 has been disarmed/unlocked. This will only happen if no zones have not been opened.

FO4 - 5 minutes: This option allows the CM900AS to automatically relock/rearm 5 minutes after it has been disarmed/unlocked. This will only happen if no zones have not been opened.

1-11 Ignition / Accessory Upon Unlock: This feature will provide an Ignition/Accessory output with unlock/disarm command. **(NOTE: will not provide pulse output with disarm before remote starting)**

FO1 - Off: (default)

FO2 - Ignition (+) and (-) pulse output with disarm: This option will pulse both (+) and (-) ignition wires upon unlock/disarm. *Most new Ford vehicles require ignition pulsed + immobilizer with unlock to disarm the factory alarm.*

FO3 - Accessory (+) and (-) pulse output with disarm: This option will pulse both (+) and (-) accessory wires upon unlock/disarm.

FO4 - Ignition (+) and (-) pulse and Accessory (+) and (-) pulse output with disarm: This option will pulse both (+) and (-) ignition and accessory wires upon unlock/disarm. *Some new Ford vehicles require ignition and accessory pulsed + immobilizer with unlock to disarm the factory alarm.*

Important: Also used in cases where the vehicle's radio may turn on and stay on until the door is opened when accessory is pulsed.

1-12 2 Way Firstech Remote Updating with OEM Remote action: This feature disables the arming, disarming, and remote start confirmation updates to any Firstech 2 Way LCD when using an OEM remote.

FO1 - On: (default)

FO2 - Off: This feature disables the page back update to the 2 Way Firstech remote when your interface module provides OEM remote status updates to the CM900.

1-13 Double pulse disarm: This feature enables the FAD output. It will pulse 2 times with a single disarm command.

FO1 - Off (default): Standard single pulse output on the FAD wire. (orange/white by default)

FO2 - On: This feature will generate a double pulse output on the FAD wire. (orange/white by default)

1-15 Trunk Output Timing: This feature determines the length of output time for the (+) or (-) analog trunk release wire.

FO1 - 1 Second: (default) Will provide a 250mA (-) negative output for 1 second on any POC that is programmed for trunk release or setting 28.

FO2 - 2 Seconds: FO1- 1 Second: (default) will provide a 250mA (-) negative output for 2 seconds on any POC that is programmed for trunk release or setting 28.

FO3 - 3 Seconds: FO1- 1 Second: (default) will provide a 250mA (-) negative output for 3 seconds on any POC that is programmed for trunk release or setting 28.

FO4 - 4 Seconds: FO1- 1 Second: (default) will provide a 250mA (-) negative output for 4 seconds on any POC that is programmed for trunk release or setting 28.

1-16 Siren/Horn mute control: this feature allows the installer to enable or disable the siren/horn mute control. The mute feature will silence the siren or horn during arm, disarm, and start from the Firstech remote.

FO1 - Disabled: (default) will not allow for the Firstech remote to mute the siren or horn output.

FO2 - Enabled: this option will allow the end user to activate or deactivate the arm/disarm chirps using a Firstech 4/5 button remote or DroneMobile.

2-01 Tach Sensing Method: This feature will determine the point at which the CM900 releases the starter based on the sampled tach method.

FO1 - Optimal Tach reading: This option will allow the CM900 to sample the tach signal several times during tach programming and select the optimal tach voltage at which to release the starter.

FO2 - Previous tach reading: This option will set the CM900 to record the idle voltage which it is being programmed. The CM900 will release the starter once the idle tach voltage is met.

2-02 Turbo Mode: (*This feature requires door and e-brake input*) **NOTE: a door input must be connected to allow Turbo Timer to continue to run after exiting the vehicle.** This feature allows the user to activate Turbo Timer Mode with their Firstech remote or accessory. This will keep the engine running after removing the key for the specified time selected below. (*Please check specific remote or accessory user 's manual for steps to activate Turbo Timer Mode*)

FO1 - Off: (default)

FO2 - 2 Minutes: This option allows for a 2-minute run time after Turbo Mode has been engaged. To engage, set the e-brake, remove key, exit vehicle, and lock with the Firstech remote or accessory.

FO3 - 1 minute: This option allows for a 1-minute run time after Turbo Mode has been engaged. To engage, set the e-brake, remove key, exit vehicle, and lock with the Firstech remote or accessory.

FO4 - 4 minutes: This option allows for a 4-minute run time after Turbo Mode has been engaged. To engage, set the e-brake, remove key, exit vehicle, and lock with the Firstech remote or accessory.

2-03 Diesel Timer: *Note: OP500 required to adjust time from any of the default settings, will show up as DISL on the top line of text when option 2 or 3 are enabled.* This feature provides a timed alternative solution to a hard-wired glow plug input to enable the CM900 to wait to start.

FO1 - Wire: (default) This option will allow the CM900 to read input on wait to start wire. It may be connected to a wait to start indicator on a diesel vehicle. When the CM900 sees input, it will delay the crank output for up to 99 seconds or until signal has been removed.

FO2 - Program (3-99 seconds): default setting is 12 seconds. This option allows the installer to adjust the time in 1 second increments that the CM900 waits before cranking the starter.

FO3 - 7 seconds: This option offers a fixed 7 second delay before providing starter output.

FO4 - GM Ignition delay: This option is designed to delay the ignition output 250mS during the remote start procedure. This allows for the accessory to output first, then ignition, to simulate normal key starting. There are some vehicle models that may require this additional delay in order for it to remote start properly.

2-04 Trigger **Start:** This feature changes the number of pulsed inputs (min of 60mS per pulse) required to activate the remote start sequence using the trigger start input wire. (900AS Pink wire/CM900S RED wire, pin 11, CN3). **Note: If option 4 is selected and OEM remote control feature is available through data, the Control Module will accept 3 OEM lock commands to activate the start sequence.**

FO1 - Off: (default)

FO2 - Single pulse: This option will trigger the remote start sequence with a single pulsed input to the trigger start wire. This is ideal when adding accessories that can trigger the CM900.

FO3 - Double pulse: This option will trigger the remote start sequence with 2 pulses to the trigger start input wire. This can be used when integrating with an OEM keyless entry remote.

FO4 - Triple pulse: This option will trigger the start sequence with 3 pulses to the trigger start input wire. This is ideal when trying to integrate the OEM keyless entry remote. Note: this option will also allow the CM900 to accept a 3-pulse input from OEM remote commands through data.

2-05 Cold or Hot Start: **Note: the Firstech thermistor temp sensor must be connected to the CM900 in order to use these options.** This feature turns on the cold/hot Timer start features.

FO1 - Off: (default)

FO2 - Cold start: This option enables the thermistor when using Timer Start Mode. It will start the car at the preset cold temperature (see feature 2-08) according to the selected timer start option (see feature 2-06)

FO3 - Hot Start: This option enables the thermistor when using Timer Start Mode. It will start the car at the preset hot temperature (see feature 2-09) according to the selected timer start option. (see feature 2-06)

FO4 - Cold and Hot start: This option enables the thermistor when using Timer Start Mode. It will start the car at the preset Cold and Hot temperature (see features 2-08 and 2-09) according to the selected timer start option (see feature 2-06)

2-06 Timer Start: This feature is designed to allow the user to have the CM900 automatically remote start at the end of a selected timed cycle. It also be controlled by the thermistor, or a selected time by 2 way remote, so it will start at a specified temperature at the end of the timed cycle or a specific time.

FO1 - 3-hour cycle: (4-minute runtime, 8-minute runtime for diesel) Once Timer Mode is enabled (see feature 2-13) the CM900 will wait 3 hours, remote start and run for 4 minutes unless the cold start feature is enabled. If this is the case, the CM900 will check the temperature once every 3 hours. If it is at or below the selected temperature, (see feature 2-08) it will start and run for 4 minutes.

The same procedure will apply to the hot start feature. If there is any interaction with the CM900 after timer mode has been activated using the Firstech remote or accessory, timer mode will be cancelled and must be re-started to start a new timed cycle.

FO2 - 2 hour repeat with cold starting: (runtime based on feature 2-07 option setting and cold start setting based on feature 2-08) Note: 2-way LCD remote required. This option is designed to monitor the temperature 2 hrs. After timer mode is set and start if it is at or below the preset cold start temperature (see feature 2-08). This process will continue until the user manually starts or remote starts the vehicle.

FO3 - Reserve runtime: (runtime based on feature 2-07 option setting) Note: 2-way LCD remote required. This option will allow the user to set a predetermined time to remote start on the 2 ways LCD remote. Once the timer mode is activated it will start the countdown timer on the CM900 based on the difference of time between what the remote clock is set to and the timer mode time is set to. **(NOTE: Must be a minimum of 20 minutes from current time displayed on the remote.)**

I.e. remote time reads 7:00pm and timer mode time is set to 7:00 am the CM7 will activate the timer mode to go for 12hours before it starts. Note: it is important that the remote time is as accurate as possible when activating the timer mode to ensure that it will start at the desired time. If there is any interaction with the vehicle or system after timer mode has been activated it will cancel the timer.

FO4 - 24 hour repeat with cold starting: (runtime based on feature 2-07 option setting and cold start setting based on feature 2-08) Note: 2-way LCD remote required. This option is designed to monitor the temperature 24 hrs. After timer mode is set and start if it is at or below the preset cold start temperature (see feature 2-08). This process will continue until the user manually starts or remote starts the vehicle.

2-07 Remote Start Runtime: This feature consists of four different settings for the remote start run time.

FO1 - 15 minutes (default)

FO2 - 25 minutes

FO3 - 45 minutes

FO4 – 3-minute: This feature is available to comply with local idle laws prohibiting extended idle times

2-08 Cold start Temperature: This feature allows the user 4 different temperature settings for cold start operation

FO1 - 14°F/-10°C: will activate the start sequence at the end of the time cycle (set by feature 2-06 option setting) if temperature is at or below this temperature.

FO2 - -4°F/-20°C: will activate the start sequence at the end of the time cycle (set by feature 2-06 option setting) if temperature is at or below this temperature.

FO3 - 23° F/-5° C: will activate the start sequence at the end of the time cycle (set by feature 2-06 option setting) if temperature is at or below this temperature.

FO4 - 5° F/-15° C (default) PROGRAMMABLE -30 ~ 0 [°C] / -22 ~ 32 [°F]: (using the OP500 programmer with software v.31 or newer that can be found at www.firstechdata.com) will activate the start sequence at the end of the time cycle (set by feature 2-06 option setting) if temperature is at or below this temperature.

2-09 Hot Start Temperature: This feature allows the user 4 different settings for hot start operation

FO1 - 77° F/25° C: will activate the start sequence at the end of the time cycle (set by feature 2-06 option setting) if temperature is at or above this temperature.

FO2 - 86° F/30° C: will activate the start sequence at the end of the time cycle (set by feature 2-06 option setting) if temperature is at or above this temperature.

FO3 - 95° F/35° C: will activate the start sequence at the end of the time cycle (set by feature 2-06 option setting) if temperature is at or above this temperature.

FO4 - 104° F/40° C (default) PROGRAMMABLE 20 ~ 65 [°C] / 68 ~ 150 [°F]: (using the OP500 programmer with software v.310 or newer that can be found at www.firstechdata.com) will activate the start sequence at the end of the time cycle (set by feature 2-06 option setting) if temperature is at or above this temperature.

2-10 Engine Sensing: This feature determines how the CM will monitor the state of the engine (running or not running), release the starter output, and consider the vehicle running. We provide 4 options for engine sensing methods

FO1 - Tachless Mode – (Automatic Transmission Vehicles Only)

Tachless sensing is an alternative engine sensing mode. It does not require a connection to the vehicle other than the main ignition harness. **Note: due to the delayed peak charging found with most late model computer controlled alternators, this feature may not be reliable.**

FO2 - Tach: This option uses a hard-wired input (yellow/black CN3 connector) or data signal from a compatible interface module to read the vehicles RPM's to release the starter during the remote start process and determine that the engine is running.

FO3 - Alternator: This option uses the hardwired tach input (yellow/black CN4 gray connector) to read the voltage output from the vehicles stator wire to release the starter during the remote start process and determine that the engine is running. **Note: with late model computer-controlled alternators, the peak charging voltage may not be reached for several seconds after the vehicle is running. This may make this option inconsistent when the battery is low or very cold.**

FO4 - No Connection Assumed running: Note: can only be used with automatic transmission. (default to 3 seconds), This option provides a fixed starter output, and will then leave the rest of the CM900 ignition and accessory outputs on and assuming the vehicle is running. **Note: This is a good option for (PTS) Push to Start applications and Hybrid vehicles (except manual transmission).**

2-11 Advanced Tachless: This feature when used in conjunction with feature 2-10 option 1 will provide an enhanced Tachless engine sensing mode.

FO1 - Off: (default)

FO2 - On: this option will enable the advanced algorithm. This option is better suited for late model computer-controlled vehicles or older vehicles with poor battery conditions. **Note:** feature 2-10 must be set to option 1 for it to work properly. If there is tach signal input to the CM900 either analog or data interface module, this option will not operate consistently.

2-12 Crank Time: This feature allows the user to add or remove crank time to the selected option for feature 2-10 (engine sense).

FO1 - Standard: (default crank time no change).

FO2 - +200mS: To standard crank time of option selected on feature 2-10.

FO3 - +600mS: Adds 600 milliseconds to standard crank time of option selected on feature 2-10.

FO4 - (-)200mS: releases the starter output 200 Milliseconds earlier than standard crank time of option selected on feature 2-10.

2-13 Timer Mode: (Note: Must be set to on to operate timer mode). This feature enables the user to activate and deactivate Timer Mode (see option 2-06) using the Firstech remote or accessory (see the user manual for that remote for instructions).

FO1 - Off: (default)

FO2 - On: user must still activate timer mode using their Firstech remote or accessory.

2-14 Turbo Timer activation “**Activate with**”: **CM900AS ONLY**

This feature will allow the user to customize the process used to activate the turbo timer feature. Once user has activated turbo timer feature, there is a **5-minute** window to “Start Timer” the CM cancels Turbo Timer feature. **NOTE: a door input must be connected to allow Turbo Timer to continue to run after exiting the vehicle.**

FO1 – Parking/E-Brake set: When set to this option, when the CM sees the parking/E-Brake input (analog or through data) it will activate the necessary ignition, accessory outputs and interface module, to leave the vehicle running and activate Turbo Timer Mode.

FO2 – Parking/E-Brake set + Hold Start button for 2.5 seconds: When set to this option, the CM will need Parking/E-Brake input (analog or through data) AND a start command from a remote (hold start button for 2.5 seconds) to activate the necessary ignition, accessory outputs and interface module, to leave the vehicle running and activate Turbo Timer Mode.

FO3 – 2x’s Parking/E-Brake: (requires action) Set => Release => Set (within 7 seconds): When set to this option, the CM will need Parking/E-Brake input (analog or through data) set then release then set again within 7 seconds to activate the necessary ignition, accessory outputs and interface module, to leave the vehicle running and activate Turbo Timer Mode.

2-15 Turbo Timer Mode “**Start Timer**”: **CM900AS ONLY** This feature will allow the user to customize the process used to start the Turbo Timer.

FO1 – Last Door Closed (doors lock before shutting down): (default) (*actions required within 5 minutes*) This option will start the Turbo Timer once the last door/zone has closed and lock the doors a few seconds **BEFORE** the timer ends and the engine shuts off. **NOTE: a door input must be connected to allow Turbo Timer to continue to run after exiting the vehicle.**

FO2 – Last Door Closed AND LOCK command: (*actions required within 5 minutes*) This option will start the Turbo Timer once the last door/zone has close **AND** a **LOCK** command has been sent. **NOTE: a door input must be connected to allow Turbo Timer to continue to run after exiting the vehicle.**

FO3 – 10 seconds after the Last Door Closed OR LOCK command: (*actions required within 5 minutes*) This option will start the Turbo Timer 10 seconds after the last door/zone has close (*allowing the user to access other parts of the vehicle in case there are belongings that need to be removed before the turbo time starts*) **OR** after the last door is closed and a lock command is sent. **NOTE: a door input must be connected to allow Turbo Timer to continue to run after exiting the vehicle.**

FO4 – Last Door Closed (doors lock after shutting down): (default) (*actions required within 5 minutes*) This option will start the Turbo Timer once the last door/zone has closed and lock the doors a few seconds **AFTER** the timer ends and engine shuts off. (*this can be used when the vehicles door will*

not lock properly while the remote start is shutting down) **NOTE: a door input must be connected to allow Turbo Timer to continue to run after exiting the vehicle.**

2-16 Force Remote Start shutdown: This feature will allow the user to have the remote start automatically shut down as soon as there is a door zone opened.

FO1 – OFF (default)

FO2 – DOOR OPEN: This option will shut down the remote start when door zone is opened.

3-01 Parking Lights while Remote Started: This feature changes the parking light behavior during remote start.

FO1 - Constant output: This option will keep the parking light output (+ and -) on steady throughout the entire runtime (runtime based on feature 2-07 selection)

FO2 - Flashing output: This option will flash the parking light output (+ and -) throughout the entire runtime (runtime based on feature 2-07 selection)

FO3 - Off: This option turns the parking lights off while the vehicle is remote started.

FO4 - Off with lock and unlock only: This feature is designed to eliminate redundant parking light flash with lock/unlock when interface module flashes the parking lights controlling the Factory security. This will provide parking light output with remote start and troubleshooting diagnostics.

3-02 Confirmation chirps: This feature will allow the user to select a shorter **siren or horn** output time to simulate a quieter arm/disarm/start output.

FO1 - 30mS: This is a 30 milliseconds siren output with arm, disarm, and start confirmation chirps. It will produce a “medium” volume sound. (Softer than the standard 60mS output)

FO2 - 15mS: This is a 15-millisecond siren output with arm, disarm, and start confirmation chirps. It will produce a “short” or quiet volume of sound. (Significantly softer than the standard 60mS output)

FO3 - 60mS: This is a standard 60 millisecond siren output with arm, disarm, and start confirmation chirps.

3-03 Dome Light Delay: **CM900AS ONLY** This option is used when connecting the door trigger input to the vehicle's dome light circuit. It delays the door trigger input to prevent the door open icon displaying on 2 Way remotes upon lock/arm.

FO1- Off: (default)

FO2 - 5 seconds: This option will delay the door trigger input for 5 seconds when arming the system to account for any vehicle dome light output delay.

FO3 - 45 seconds: This option will delay the door trigger input for 45 seconds when arming the system to account for any vehicle dome light output delay.

FO4 - Auto: This option will allow the **CM900AS** to wait for a change in polarity on the door input circuit, after the system has been armed, to monitor for security.

3-04 Starter-Kill: This option determines the operation of the GWA wire (CM900AS CN3 Pin 18 Blue/white – CM900S must use a POC set to Starter kill option 29)

FO1 - Anti grind + Starter interrupt: this option will allow for the Starter Kill wire to provide a negative output when the system is armed or remote started. This will enable a starter interrupt to prevent the vehicle from being started with the key when in an armed state or grinding the starter during a secure remote start take over.

FO2 - Anti Grind only: This option will allow the Starter Kill wire to provide a negative output when the system is remote started which can be used to enable starter interrupt and prevent the user from grinding the starter during secure remote start take over.

FO3 - Anti Grind and passive starter interrupt: This option will allow for Starter Kill wire to provide a negative output when the system is remote started, or the passive starter interrupt is engaged. This will prevent the user from grinding the starter during secure remote start take over, and enable starter interrupt 45 seconds after the ignition has been turned off.

3-07 Siren Duration: **CM900AS ONLY** This feature changes the duration of the siren during full alarm.

FO1 - 30 seconds: this option will provide 30 seconds of output (+) on the siren wire (brown CN3) during full alarm.

FO2 - 60 seconds: this option will provide 60 seconds of output (+) on the siren wire (brown CN3) during full alarm.

FO3 - 120 seconds: this option will provide 120 seconds of output (+) on the siren wire (brown CN3) during full alarm.

FO4 - Chirps for 20 seconds: this option will provide 20 seconds of pulsed output (+) on the siren wire (brown CN3) during full alarm.

3-08 Horn output: This feature controls the horn output behavior during Arm, Disarm, and Remote Start. (POC 7 White wire or POC setting #8)

FO1 - On double lock only: (default) this option is designed to simulate a factory keyless entry system by providing a horn output pulse (based on the option selection of feature 3-02) each time the lock command is sent a second time within 8 seconds of the first lock command.

FO2 - On lock and Unlock only: this option will provide a horn output pulse (based on the option selection of feature 3-02) with each lock or unlock confirmation.

FO3 - On lock, Unlock, and Start: this option will provide a horn output pulse (based on the option selection of feature 3-02) with each lock, unlock, remote start command and remote started confirmation.

FO4 - On double lock and Start: this option is designed to simulate a factory keyless entry system by providing a horn output pulse (based on the option selection of feature 3-02) each time the lock command is sent a second time within 8 seconds of the first. In addition, it will provide a horn output pulse with remote start command and remote started confirmation.

3-09 Siren output: **CM900AS ONLY** This feature controls the siren (+) output behavior during Arm, Disarm, and Remote Start.

FO1 - On lock, Unlock, and Start: (default) this option will provide a (+) siren output pulse (based on the option selection of feature 3-02) with each lock, unlock, remote start command and remote started confirmation.

FO2 - On double lock only: This option is designed to simulate a factory keyless entry system by providing a (+) siren output pulse (based on the option selection of feature 3-02) each time the lock command is sent a second time within 8 seconds of the first lock command.

FO3 - On lock and Unlock only: this option will provide a (+) siren output pulse (based on the option selection of feature 3-02) with each lock or unlock confirmation.

FO4 - On double lock and Start: this option is designed to simulate a factory keyless entry system by providing a (+) siren output pulse (based on the option selection of feature 3-02) each time the lock command is sent a second time within 8 seconds of the first. In addition, it will provide a (+) siren output pulse with remote start command and remote started confirmation.

3-10 Valet Mode: This feature will change the enter/exit valet mode procedure based on the option selected.

FO1 - Key 5 times with Foot Brake Trigger or Remote (Lock + Trunk) while Ignition is on: This option allows the user to enter valet mode using either method described. *Note: the user may exit valet mode with their Firstech remote (please check users guide for each remote for valet mode exit procedure), or with the key to ignition or “on” position and press the foot brake 10 times within 10 seconds.*

FO2 - Key 5 times with Foot Brake Trigger or Remote (Lock + Trunk): This option allows the user to enter valet mode using either method described. *Note: the user may exit valet mode with their Firstech remote (please check users guide for each remote for valet mode exit procedure), or with the key to ignition or “on” position and press the foot brake 10 times within 10 seconds.*

3-13 Defrost output Temperature Control: This feature will determine the temperature at which the CM900 will provide an output on any POC programmed with setting 17 or 21 (defrost and defrost 2).

FO1 – Standard (activate with every start): (Default) this option will provide an output (length of output based on feature 3-13 option settings) on any POC programmed with setting 17 (defrost) or 21 (defrost 2) every time with remote start confirmation.

FO2 - 32°F: (thermistor required) this option will provide an output on any POC programmed with setting 17 (defrost) or 21 (defrost 2) with remote start confirmation on. This will happen if the temp reading is at or below 32°F. (Length of output based on feature 3-13 option settings)

FO3 - 42°F (default) PROGRAMMABLE 0°C/32°F ~ 13°C/55°F: (thermistor required) this option will provide an output on any POC programmed with setting 17 (defrost) or 21 (defrost 2) with remote start confirmation on. This will happen if the temp reading is at or below 42°F (**default temp**) but can be programmed up to 55°F (using the OP500 programmer with software v.30 or newer) (Length of output for POC setting 17, based on feature 3-13 option settings)

FO4 – AUX 1: This option will allow the user to activate/deactivate the Defrost outputs using the AUX 1 function from any Firstech remote or DroneMobile. **NOTE: This feature does not use an AUX output**

3-14 Defrost output Timing: This feature controls the output timing of POC setting 17, defrost. *Note: POC setting 21 defrost 2 is has a fixed pulsed output and is NOT affected by this feature.*

FO1 - 500mS Pulse: This option will provide a 500 Millisecond pulsed output on any POC programmed with setting 17 (Defrost) with timing based off feature 3-12 option setting.

FO2 - 3 minute latched: This option will provide a 3-minute latched output on any POC programmed with setting 17 (Defrost) with timing based off feature 3-12 option setting. (This would be good for any rear-view mirror defrost that may need a short-latched output time.)

FO3 - 7 minute latched: This option will provide a 7-minute latched output on any POC programmed with setting 17 (Defrost) with timing based off feature 3-12 option settings. (This would be good for many front, rear, or rear-view mirror defrost functions that may need a longer latched output time.)

FO4 - Latched for entire runtime: (Remote start runtime based off feature 2-07 option setting) This feature will provide a latched output for the entire remote start runtime on any POC programmed with setting 17 (defrost) with timing based off feature 3-12 option settings. Caution: make sure not to latch rear defrost functions on for too long as it may cause damage to the heating elements in the window.

3-15 Soft **Disarm:** this feature will enable Factory Alarm Arm (FAA) and Factory Alarm Disarm (FAD) outputs to trigger when silencing the Compustar siren when sounding with full alarm.

FO1 - Off: (Default) this will keep the standard Compustar soft disarm operation. Soft disarm feature allows the user to silence the Compustar siren as its sounding with full alarm without fully disarming the system which may unlock the doors and leave the vehicle unsecure.

FO2 - On: this option will provide a FAD output on both data and analog connections, when the user taps the unlock/disarm once to silence the Compustar system while it's sounding, so it will disarm any factory alarm that may be sounding as well. In case the FAD function unlocks the doors the CM7 will send the FAA on both data and analog connections 5 seconds later to make sure the vehicle is re-locked and secure. (This feature works well with GM, Chrysler, Dodge, Jeep, Toyota, Lexus vehicles that may have factory security.)

FO3 – Disarm with 1 press: This option will allow the user to completely disarm the system once it is sounding on the first unlock command. When set to this option the CM will unlock and send the FAD commands on the first disarm/unlock press from a Firstech remote.

4-01 Aux **1 Output:** This feature determines the duration of the auxiliary 1 output. (Option 4 allows the output duration to be set for a specific length of time 1-99 sec. and 1-15 min (with OP500 update only) *(Specific time setting only available when using the OP500)*

FO1 - 500mS: This option will provide a (-) negative output for 500 milliseconds (Half second) output on any POC programmed with setting 10 (AUX 1)

FO2 - Latched: This option will provide a latched (-) negative output on any POC programmed with setting 10 (AUX 1). *Note: This will stay latched until AUX 1 command is sent again to shut it off.*

FO3 - 500mS pulse + programmable timed output: this option will provide a (-) negative output for 500 milliseconds (0.5 seconds) output on any POC programmed with setting 10 (AUX 1). It will pause for 250 milliseconds then provide a timed output (based off feature 4-01 option 4). Note: to program the timed output, the user must change feature 4-01 to option 4, then adjust AU1 (AUX programmable output time) to desired time. To complete the programming steps, feature 4-01 must be changed to option 3. *I.e. 0.5 second pulse...pause... 10 second pulse, this option can be used to roll windows up or down on a vehicle that requires a similar action using the driver's door key cylinder.*

FO4 - Program: This option allows the AUX output time to be programmed for a duration between 1-99 seconds. Once selected the OP500 will display AU1 and below it will represent the time the output will provide when triggered. *Note: with an OP500 update to v.31 there will be additional time duration between 1-15 minutes available.*

- 4-02 **Aux 2 Output:** This feature determines the duration of the auxiliary 2 output. (Option 4 allows the output duration to be set for a specific length of time 1-99 sec. and 1-15 min (with OP500 update only) only available when using the OP500)
- FO1 - 500mS:** This option will provide a (-) negative output for 500 milliseconds (0.5 seconds) output on any POC programmed with setting 11 (AUX 2)
- FO2 - Latched:** This option will provide a latched (-) negative output on any POC programmed with setting 11 (AUX 2). *Note: This latched output will reset when ignition is turned on.*
- FO3 - 500mS pulse + programmable timed output:** this option will provide a (-) negative output for 500 milliseconds (0.5 seconds) output on any POC programmed with setting 11 (AUX 2). It will pause for 250 milliseconds then provide a timed output (based off feature 4-02 option 4). Note: to program the timed output, the user must change feature 4-02 to option 4, then adjust AU2 (AUX programmable output time) to desired time. To complete the programming steps, feature 4-01 must be changed to option 3. (i.e. half second pulse...pause...10 second pulse) *This option can be used to roll windows up or down on a vehicle that requires a similar action using the driver's door key cylinder.*
- FO4 - Program:** This option allows the AUX output time to be programmed for a duration between 1-99 seconds. Once selected the OP500 will display AU2 and below it will represent the time the output will provide when triggered. *Note: with an OP500 update to v.31 there will be additional time duration between 1-15 minutes available.*
- 4-03 **Aux 1 Output Control:** This feature allows the user to configure the method of which Auxiliary 1 can be activated.
- FO1 - Remote:** (default) This option allows AUX 1 (output time based on feature 4-01) to be triggered by any 4 button Firstech remote or drone.
- FO2 - With Arm:** this option will trigger AUX 2 (output time based on feature 4-02) any time the CM900 is locked/armed the first time (I.e. if you send a second lock/arm command it will not trigger again)
- FO3 - With Disarm:** this option will trigger AUX 1 (output time based on feature 4-01) any time the CM900 is unlocked/disarmed. *Note: the system must be in the armed state when disarming to trigger AUX 1. (I.e. if the vehicle is already in the unlocked/ disarmed state and you send a second unlock/disarm command it will not trigger the output)*
- 4-04 **Aux 2 Output Control:** This feature allows the user to configure the method of which Auxiliary 2 can be activated.
- FO1 - Remote:** (default) this option allows AUX 2 (output time based on feature 4-02) to be triggered by any 4 button Firstech remote or drone.
- FO2 - With Arm:** this option will trigger AUX 2 (output time based on feature 4-02) any time the CM900 is locked/armed the first time (I.e. if you send a second lock/arm command it will not trigger again)
- FO3 - With Start:** this option will trigger AUX 2 (output time based on feature 4-02) any time the CM900 remote start sequence is activated. Note: this output timing will trigger at the same time as GWR (status output)
- 4-05 **Secure Aux Output:** this feature is designed to prevent accidental activation of the AUX outputs by requiring an additional step when using any 4 buttons or 2-way LCD Firstech remote.

FO1- On: (default) this option will require the user to perform an additional step before activating AUX output using any Firstech 4 button or 2-way LCD remote (2way remotes with Roman numeral buttons will require a 0.5 second tap of button IV before activating any of the AUX outputs. 2Way LCD remotes with lock/unlock/trunk/start icons on the buttons use the start button for the same. 1way remotes require the user to hold trunk + start buttons for 2.5 seconds before activating AUX outputs.)

FO2- Off: this option will disable the additional step required by the user to activate the AUX outputs.

FO3- On while armed: this feature will only require the user to perform the additional override step to activate Aux outputs **ONLY WHEN** the CM900 is **ARMED**. While the system is disarmed or unlocked this step is not required.

4-08 Sliding **door control for datalink:** (must be enabled to allow data to data sliding door control) This feature will provide an Unlock or Factory Alarm Disarm (FAD) output when triggering the AUX control using iDatalink Modules (Sliding Doors)

FO1 - Off: (default) This option does not provide an unlock or a FAD output when activating AUX output control using the iDatalink modules.

FO2 - Unlock and FAD: This option will provide unlock and a FAD output when activating AUX output control using iDatalink modules.

FO3 - FAD only: This option will only provide a FAD (factory alarm disarms) output when activating AUX output control using iDatalink modules.

4-10 Positive Input (+): (**PINK wire CN3 Pin 11 CM900AS**) (**RED wire CN3 Pin 11 CM900S**) Default to Trigger Start Input, this feature will determine the input function of the positive input wire

FO1 - Trigger start input: This option will enable to be used as a trigger for activating the remote start function using a (+) pulse input on the positive input wire CN3 pin 11

FO2 – Ignition input: This option will enable the positive input wire CN3 pin 11 to be used as an (B+) Ignition input only and be used for any application where ignition output is not required. Including remote programming or Ignition controlled door locks

FO3 - (+) keysense input: this option will enable the positive input wire CN3 pin 11 to be used as a key sense INPUT to the CM. The keysense input will keep the system from passively arming.

FO4 - (+) Glow plug: this option will allow the positive input wire CN3 pin 11 to be used as a glow plug delay or wait to start input. This is recommended for diesel vehicles that may have a positive analog glow plug output available.

4-11 UART port 2: This feature will determine the communication protocol of the gray UART port.

FO1 - Drone: (default) This option will allow the grey UART port to communicate using the Drone data protocol.

FO2 - Fortin: This option allows the grey UART port to communicate using the Fortin data protocol. Note: there is no longer an “auto detect” feature with the Fortin protocol it must be changed manually.

4-12 Impact sensor: **CM900AS ONLY** This feature will determine the impact sensor input port function.

FO1 - Standard Shock: This option allows the CM900 to communicate with the FT-Shock analog shock sensor. This impact sensor is manually adjustable on the sensor.

FO2 – DAS/DAS II: (default) This option allows the impact sensor port to communicate with the DAS including sensitivity programming and monitor any sensor output to the **CM900AS**.

FO3 - Arm/Disarm input: This option allows the impact sensor port (red) to be used as a **CM900AS** arm/lock and disarm/unlock input. *Note: the arm input requires 2 pulses to trigger arm/ lock and 1 pulse to disarm/unlock.*

FO4 - Arm/Disarm input: this option allows the impact sensor port (red) to be used as a **CM900AS** arm/lock and disarm/unlock input. *Note: the arm input requires 1 pulse to trigger arm/ lock and 1 pulse to disarm/unlock.*

4-14 Low battery: This feature offers low battery options to help alert the user of a low battery in the vehicle.

FO1 - Off: (default) This option does not provide a low battery indication.

FO2 - On: This option will provide an alert to any Firstech 2 Way LCD remote or Drone when the vehicle's battery voltage (at the CM900 power connector) drops to 11.7volts for a minimum of 1 second. *Note: the Firstech 2-way LCD remote must be within range of the vehicle to receive the low battery alert and this option must be set to receive low battery alerts to Drone.*

FO3 - On + Start: This option will provide an alert to any Firstech 2 Way LCD remote or Drone when the vehicles battery voltage (at the C900 power connector) drops to 11.7volts for a minimum of 1 second. In addition to the alert the user can active the Timer mode (please refer to this manual for timer mode feature description) to enable the low battery start function. Once the timer mode is active the CM900 will adhere to the timer mode feature options selected but also monitor the vehicle battery voltage which will override the timer mode and start at 11.7 volts.

Special Option Groups 1-2

IMPORTANT: The OP500 is required to change settings in Special Option Groups 1 and 2. Special Option Group 1

SO1- Diesel Timer: (Option 2-03 must first be set to setting 2.) This special option allows a specific wait to start time (in seconds) to be programmed. This prevents the need for a timer relay and eliminates a connection to the "wait to start" wire.

SO2 - Aux 1 Output Timing: (Option 4-01 must first be set to setting 4.) This special option allows a specific output duration for Aux 1 to be programmed 1-99 seconds. *Note with OP500 update to software v.30, latched output time 1-15 minutes are available for programming in addition to the standard 1-99 seconds.*

SO3 - Aux 2 Output Timing: (Option 4-02 must first be set to setting 4.) This special option allows a specific output duration for Aux 2 to be programmed 1-99 seconds. *Note with OP500 update to software v.30, latched output time 1-15 minutes are available for programming in addition to the standard 1-99 seconds.*

SO4- Cold Start Temperature: (Feature 2-08 must first be set to option 4.) This special option allows a specific temperature (in degrees F or degrees C based on OP500 software update v.30 V1 or V2) to be set between -30 ~ 0 [°C] / -22 ~ 32 [°F] with a default temperature of -15°C / 5°F default for the Cold Start Timer mode activation

SO5- Hot Start Temperature: (Feature 2-09 must first be set to option 4.) This special option allows a specific temperature (in degrees F or degrees C based on OP500 software update v.30 V1 or V2) to be set between 20°C ~ 40°C / 68°F ~ 104°F with a default temperature of 40°C / 104°F default the Hot Start Timer Mode activation

SO6- Defrost Temperature: (Feature 3-13 must first be set to option 3.) This special option allows a specific temperature (in degrees F or degrees C based on OP500 software update v.30 V1 or V2) to be set between 0°C/32°F ~ 13°C/55°F with a default temperature of 6°C/42°F for the defrost activation

Special Option Group 2

This special option group allows you to determine the output type of the POC wire you're using. For example, if you want to set POC #5 (default setting status out with setting value of 0) to Aux 1, you will need change special option 5 to setting value 10. This must be done with the OP500.

POC 1 - Green/White • Parking Light Output: (default setting value 0) This channel will provide a 250mA (-) negative output when the CM900 parking lights output is generated (*function also POC setting 1*)

POC 2 - Blue/Green • Lock: (default setting value 0) This channel will provide a 250mA output with the lock/arm command. (*function also POC setting 25*)

POC 3 - Blue • Unlock: (default setting 0) This channel will provide a 250mA output with the unlock/disarm command. (*function also POC setting 26*)

POC 4 - Black • GWR (ground when running aka status output): (default setting value 0) This channel will provide a 250mA output with the remote start activation command and continue to provide output until 100mS after the remote start process has shut own. (*function also POC setting 5*)

POC 5 - Orange • FAA (Factory Alarm Arm): (default setting value 0) This channel will provide a 250mA output with the lock/arm command. *Note: the CM900 will provide this output approx. 100mS before the unlock output.* (*function also POC setting 6*)

POC 6 - Orange/White • FAD (Factory Alarm Disarm): (default setting value 0) This channel will provide a 250mA output with the unlock/disarm command. *Note: the CM900 will provide this output approx. 100mS before the unlock output.* (*function also POC setting 7*)

POC 7 - White • Horn: (default setting) This channel will provide a 250mA output when Horn is triggered. (*function also POC setting 8*)

POC setting value description (SV)

SV 0 – **DEFAULT SETTING by wire**

SV 1 - **Parking light:** provides a 250mA (-) negative parking light output on any POC programmed with this setting.

SV 2 - **Starter:** provides a 250mA (-) negative starter output on any POC programmed with this setting.

SV 3 - **Ignition:** provides a 250mA (-) negative ignition output on any POC programmed with this setting.

SV 4 - **Accessory:** provides a 250mA (-) negative accessory output on any POC programmed with this setting.

SV 5 - **GWR (status):** provides a 250mA (-) negative while remote started on any POC programmed with this setting. Can be used to activate interface modules during the remote start process.

SV 6 - **FAA (Factory Alarm Arm):** provides a 250mA, 800mS (-) negative output with the arm/lock command on any POC programmed with this setting.

- SV 7 - **FAD (Factory Alarm Disarm)**: provides a 250mA, 800mS (-) negative output with the disarm/unlock command on any POC programmed with this setting.
- SV 8 - **Horn**: provides a 250mA (-) negative output with output control based on feature 3-08 option setting when using any POC programmed with this setting.
- SV 9 - **Dome light supervision**: provides a 250mA (-) negative output with the disarm/unlock command, on any POC programmed with this setting, for up to 45 seconds or until ignition is on.
- SV 10 - **AUX1**: provides a 250mA (-) negative output (based on feature 4-01 setting) when AUX is triggered by Firstech 4 button remote, 2way LCD remote, or Drone, on any POC programmed with this setting.
- SV 11 - **AUX2**: provides a 250mA (-) negative output (based on feature 4-02 setting) when AUX is triggered by Firstech 4 button remote, 2way LCD remote, or Drone, on any POC programmed with this setting.
- SV 17 - **Defrost**: provides a 250mA (-) negative output (based on feature 3-13/3-14 settings) on any POC programmed with this setting, when defrost function has been activated (output time based on features 3-13 and 3-14 option settings)
- SV 18 - **GWA (ground While Armed)**: provides a 250mA (-) negative output on any POC programmed with this setting, while the system is armed or locked.
- SV 21 - **Defrost 2**: provides a 250mA (-) negative pulsed output only on any POC programmed with this setting, when the defrost output is engaged based on the temp setting of feature 3-13.
- SV 25 - **Lock**: provides a 250mA, 800mS (-) negative output on any POC programmed with this setting, with the lock/arm command.
- SV 26 - **Unlock**: provides a 250mA, 800mS (-) negative output on any POC programmed with this setting, with the unlock/disarm command.
- SV 27 - **2nd Unlock**: provides a 250mA, 800mS (-) negative output on any POC programmed with this setting, when using the driver's door priority feature. This wire would be used to unlock the rest of the doors while unlock should be used to unlock the isolated driver's door. *Note: this output can only be activated within 5 seconds after the first unlock command is sent.*
- SV 28 - **Trunk release**: provides a 250mA, 1 second (-) negative output (output timing based on feature 1-15 on any POC programmed with this setting, with the trunk release command.
- SV 29 - **Starter Kill**: provides a 250mA (-) negative output on any POC programmed with this setting, while the system is armed or locked, and during remote start for Anti-Grind.

Option Programming

How to Program Options

There are two ways to set options on the CM7 control modules. You can use the FT-OP500-KIT or most Firstech remotes. The remotes include 4 or 5 buttons 1 and 2 Way remotes.

Option Programming Using the FT-OP500-KIT

The OP500 can be used to change anything in the Option Tables. It is required to change settings in Special Option Groups 1 and 2.

STEP 1: Make sure system is unlocked/disarmed. Connect the antenna cable to the 4 or 6 pin ports on the top of the OP500. Once connected, the OP500 will power up if CN1 or CN3 on the control module is connected properly.

STEP 2: Use the left or right arrow keys on the OP500 to select option. Use the up or down arrow buttons to select the option setting. “1” is the default setting, “2”, “3”, and “4” are the optional settings.

Special Option Group 1: Change the timed output of the Diesel Timer or Auxiliaries 1 through 7.

Special Option Group 2: Change the Programmable Output Connections on the grey 20 pin harness.

STEP 3: Hold the “W” (Write) button for 3 seconds. This finalize option changes to the control module. Wait until OP500 displays “Success” before disconnecting.

To reset the options, hold the “R” (Reset) button and “W” (Write) buttons for 3 seconds. Then hold the “W” button for 3 seconds.

Option Programming with FT-OP100 (valet button) (*Limited feature group access 1-4*)

STEP 1: Make sure the Control Module is in a disarmed/unlocked state

STEP 2: Connect FT Valet OP-100 button to the CM’s 4 pin blue antenna port

STEP 3: Go to Ignition on (without starting) + Foot brake input applied (**in case of CM2305/CM7300 use door input in place of foot brake input**)

STEP 4: Push the valet button 5 times holding it on the 5th time for the following time lengths to reach the desired feature group:

- 1) 2 seconds **Option Group #1** (w/ light flash 1 time and siren/horn 1 chirp)
- 2) 4 seconds **Option Group #2** (w/ light flash 2 times and siren/horn 2 chirps)
- 3) 6 seconds **Option Group #3** (w/ light flash 3 times and siren/horn 3 chirps)
- 4) 8 seconds **Option Group #4** (w/ light flash 4 times and siren/horn 4 chirps)

If you would like to reset all features to their default option setting push the valet button 10 times and hold on the 10th time. Once complete, the parking lights will flash, and siren/horn will sound 5 times to confirm reset.

STEP 5: Once the Option group has been selected release the programming button. Then push and release the programming button again to select the feature number you wish to change. Once selected, wait for the parking light flash, and siren/horn to sound confirming the feature number you've selected.

STEP 6: Once you have confirmed the feature you've selected push and release the valet button to select the desired option. Once selected wait for the parking lights to flash and the siren/horn to sound confirming the option you have selected.

STEP 7: Once finished turn ignition off, please test function to verify successful feature option change

Option Programming Using a Remote

Using a remote is a timed process so review this section before beginning. Options cannot be programmed with 1 button remotes. **IMPORTANT:** Special Option Groups cannot be programmed with remotes – OP500 must be used.

STEP 1: Select the option you wish to program. (Use the corresponding table shown on the following page)

How to Program Options with 5 Button 2-Way Remotes

	Wait for chirp between each tap	Scroll Through Menu (Wait for flash between each tap)	Wait for corresponding parking light flash and/or siren chirp before selecting option	Select Option 1	Select Option 2	Select Option 3	Select Option 4
Option Menu 1	(F + Trunk) for 3 seconds then (F + Trunk) for 3 seconds	Tap Key Button		Tap Lock Button	Tap Unlock Button	Tap Trunk Button	Tap Key Button
Option Menu 2	(F + Trunk) for 3 seconds then (F + Key) for 3 seconds	Tap Key Button		Tap Lock Button	Tap Unlock Button	Tap Trunk Button	Tap Key Button
Option Menu 3	(F + Key) for 3 seconds then (F + Trunk) for 3 seconds	Tap Key Button		Tap Lock Button	Tap Unlock Button	Tap Trunk Button	Tap Key Button
Option Menu 4	(F + Key) for 3 seconds then (F + Key) for 3 seconds	Tap Key Button		Tap Lock Button	Tap Unlock Button	Tap Trunk Button	Tap Key Button

How to Program Options on 2 Way Remotes with Separate Lock and Unlock Buttons

	Wait for chirp between each tap	Scroll Through Menu (Wait for flash between each tap)	Wait for corresponding parking light flash and/or siren chirp before selecting option	Select Option 1	Select Option 2	Select Option 3	Select Option 4
Option Menu 1	Lock + Unlock for 3 seconds then Lock + Unlock for 3 seconds	Tap Key Button		Tap Lock Button	Tap Unlock Button	Hold Trunk Button for 3 seconds	Tap Key Button
Option Menu 2	Lock + Unlock for 3 seconds then Lock + Key for 3 seconds	Tap Key Button		Tap Lock Button	Tap Unlock Button	Hold Trunk Button for 3 seconds	Tap Key Button
Option Menu 3	Lock + Key for 3 seconds then Lock + Unlock for 3 seconds	Tap Key Button		Tap Lock Button	Tap Unlock Button	Hold Trunk Button for 3 seconds	Tap Key Button
Option Menu 4	Lock + Key for 3 seconds then Lock + Key for 3 seconds	Tap Key Button		Tap Lock Button	Tap Unlock Button	Hold Trunk Button for 3 seconds	Tap Key Button

How to Program Options with 2 Way Remotes with Roman Numerals

	Wait for chirp between each button hold	Scroll Through Menu (Wait for flash between each tap)	Wait for corresponding parking light flash and/or siren chirp before selecting option	Select Option 1	Select Option 2	Select Option 3	Select Option 4
Option Menu 1	(1 + 2) for 3 seconds then (1 + 2) for 3 seconds	Tap Button 4		Tap Button 1	Tap Button 2	Tap Button 3	Tap Button 4
Option Menu 2	(1 + 2) for 3 seconds then (1 + 4) for 3 seconds	Tap Button 4		Tap Button 1	Tap Button 2	Tap Button 3	Tap Button 4
Option Menu 3	(1 + 4) for 3 seconds then (1 + 2) for 3 seconds	Tap Button 4		Tap Button 1	Tap Button 2	Tap Button 3	Tap Button 4
Option Menu 4	(1 + 4) for 3 seconds then (1 + 4) for 3 seconds	Tap Button 4		Tap Button 1	Tap Button 2	Tap Button 3	Tap Button 4

How to Program Options With 1 Way Remotes

	Wait for chirp between each button hold	Scroll Through Menu (Wait for flash between each tap)	Wait for corresponding parking light flash and/or siren chirp before selecting option	Select Option 1	Select Option 2	Select Option 3	Select Option 4
Option Menu 1	Lock + Unlock for 3 seconds then Lock + Unlock for 3 seconds	Hold Trunk + Key for 3 seconds		Tap Lock Button	Tap Unlock Button	Tap Key Button	Hold Trunk + Key for 3 seconds
Option Menu 2	Lock + Unlock for 3 seconds then Lock + Key for 3 seconds	Hold Trunk + Key for 3 seconds		Tap Lock Button	Tap Unlock Button	Tap Key Button	Hold Trunk + Key for 3 seconds
Option Menu 3	Lock + Key for 3 seconds then Lock + Unlock for 3 seconds	Hold Trunk + Key for 3 seconds		Tap Lock Button	Tap Unlock Button	Tap Key Button	Hold Trunk + Key for 3 seconds
Option Menu 4	Lock + Key for 3 seconds then Lock + Key for 3 seconds	Hold Trunk + Key for 3 seconds		Tap Lock Button	Tap Unlock Button	Tap Key Button	Hold Trunk + Key for 3 seconds

STEP 2: Scroll through menu waiting for 1 parking light flash and/or siren chirp per line.

STEP 3: Once finished scrolling through menu, wait for the parking lights and/or siren chirp to confirm the option number. i.e. option 2-04 will flash and/or chirp 4 times. Select your option using the Lock, Unlock, Trunk, or Start buttons.

Resetting to Factory Defaults: To reset the options in a menu, enter the menu using your remote. To reset options with a 2 Way remote, tap the Trunk button 3 three times. To reset options with a 1 Way remote, tap the Key/Start button 3 times. Wait for parking lights to flash and/or siren chirp between each tap. After the third tap, the menu will reset back to default. This must be done for each option menu that must be reset.

Troubleshooting

Remote Start Error Codes

If the remote start fails to start the vehicle, the parking lights will flash three times immediately. Following those two flashes the parking lights will flash again corresponding to the error table below:

Number of Parking Light Flashes	Remote Start Error
1	Motor running or must program tach before 1st remote start
2	Key in ignition on position
3	Door open (manual transmission only)
5	Foot brake on
6	Hood open
7	Reservation off (manual transmission only)
8	Tach or tachless sensing failure
9	DAS sensor shutdown
10	System is in Valet Mode
2 Way remotes will display the error number "Start Err###" on the LCD.	

Remote Start Shutdown Error Codes

If the remote start sequence has been completed and the vehicle shuts down, the vehicle's parking lights will flash 4 times, pause then flash again with the error code. Tap button 4 on 2 Way remotes to initiate the shutdown error codes. On 1 Way remotes hold the Trunk and Start buttons together for 2.5 seconds.

Number of Parking Light Flashes	Remote Start Shutdown Error
1	Lost engine sensing signal (Tach/Alternator/Tachless)
2	Lost emergency brake signal (Manual Transmission)
3	Foot brake triggered
4	Hood pin triggered

Alarm LED Diagnostics

When the alarm is triggered the LED on the RPS (if installed), Secure Valet (if installed) and the LED (if installed) will flash a certain amount of times as shown in the table below. This is intended for users with 1 Way remotes.

2 Flash	Door Input
3 Flash	Shock stage 1
4 Flash	Shock stage 2
5 Flash	Tilt
6 Flash	Ignition on
7 Flash	Hood Input
8 Flash	Trunk Input
9 Flash	AUX sensor stage 1
10 Flash	AUX sensor stage 2

Frequently Asked Questions

I have everything hooked up and the system will not respond.

A: The remotes need to be programmed. Review the “Common Procedure” section of this manual.

When remote starting, the siren chirps 3 times and parking lights flash 3 then 1 time.

A: You must program tach before remote starting. Also, be sure to check the foot brake and ignition wires on the CM900.

I am trying to program the control module with the OP500 Option Programmer and it flashes “ER 01” when I plug it in to the antenna cable. What should I do?

A: Make sure that the system is not locked/armed. The last thing to check is the antenna cable or antenna extension cable – make sure this is not damaged. If you need to, try another cable. When the OP500 is working properly, it will read “success good.”

Why doesn't my CM900 have the green/white wire loop inside the brain module?

A: The CM900S/AS are for Automatic transmission vehicles ONLY.

What do I do with the thick blue wire on Connector 1?

A: It is used to power a (+) 2nd Ignition. You can also change the output via jumper within the control module. It can be changed to power a (+) 2nd Accessory or (+) 2nd Starter.

I need a ground when armed wire, does the control module have one?

A: You can use pin 1-blue/white wire on the Grey Connector 5. You must cut this wire and place a diode in line so that when the ignition on the other side of the relay goes to ground and it doesn't back feed to your accessory. Install the stripe side of the diode facing the control module.

Does the CM900 series have tachless mode?

A: Yes. The CM900S and CM900AS are default set for tachless engine sense. For details, review the "Common Procedures" section of this manual.

All my connections are made, and remotes programmed, how do I program the tach?

A: Review the "Common Procedures" section of this manual. You must have your remotes programmed, start your vehicle, then hold the remote start button. Vehicle should chirp and/or flash once if it programs, three times if it does not like the tach source.

The vehicle will lock and unlock but will not remote start or flash the parking lights.

A: The system is in Valet Mode. Tap the Lock and Trunk Buttons for a half second to exit Valet Mode. You can also turn the ignition 'On' and press the foot brake 10 times within 10 seconds.

Whenever I try to arm the vehicle, it chirps the siren 3 times and will not arm.

A: Check the hood and trunk trigger inputs.

Do the door locks flip flop in polarity?

A: No. You can use the FT-DM700 relay pack for high current positive (+) locks, or the FT-DM600 harness used for low current 600mA positive (+) locks.

What are Firmware Version Diagnostics?

A: When you turn the Ignition on and hold buttons 1 and 4 or Lock and Start for 2.5 seconds then the parking lights will flash 1 time on the CM7 series showing V.1.

What is this cartridge slot on the CM900?

A: This is the slot for the Blade cartridge system. This slot is for the Idatalink Blade remote start bypass modules. For more information on the compatibility and install information please visit www.compustar.idatalink.com. Using this system eliminates many connections between your standard control module and bypass module. **IMPORTANT:** If you are not using the Blade then you will not have or use the black 20 pin connector on the control module.

How do I take the system out of Valet Mode with a 1 Button Remote?

A: Turn the ignition on and tap the foot brake 10 times within 10 seconds.

Why are the ignition-controlled door locks option not working?

A. Check option 1-09. It should be set on 2 or 3. The option must also be turn on via the remote. On 2 Way LCD remotes tap the Lock and Start Buttons for a half second, the parking lights will flash once to show the option is turned on. On 1 Way remotes tap the Lock and Start buttons for a half second.

The vehicle remote starts when disarmed, but not when armed.

A: The starter kill relay was installed backwards. Check to make sure the yellow/black wire is going to the key side of the starter wire and that the yellow wire is going to the engine side.

The vehicle starts and shuts down 3 times in a row.

A: This usually means that the engine sensing mode is not working correctly. If you are using a coil, change to an injector or try alternator sense mode.

On the brain, how do I set the auxiliaries?

A: You must have an Option Programmer (FT-OP500-KIT) to set the auxiliaries on the CM4000, CM4200-DX, CM4300, CM5000, CM5200, CM6000, CM6200, CM6300, CM7000 and CM7200. First choose two POC wires on CN5 that you are not using. With the OP500 go into the Special Option Group 2 and set those POC's to Aux 1 and Aux 2. Review the "Special Option Group" programming section of this manual.

Technical Support Contacts

Firstech technical support is reserved for authorized dealers only.

Monday - Friday: 888-820-3690
(7:00 am – 5:00 pm Pacific Standard Time)

Email: techfeed@compustar.com

Web: www.firstechdata.com

Wiring Diagrams

Go to www.firstechdata.com to access wiring info. If you are an authorized dealer and unable to access this site please contact your sales rep or we call 888-820-3690 Monday through Friday, 8 am to 5 pm Pacific Standard Time.

Consumer sites:

- <https://www.compustar.com/>
- <http://www.dronemobile.com/>
- <https://accounts.dronemobile.com/userlogin>

Product, Support, and Vehicle info:

Product manuals, tech tips, training aids:

- <https://firstechdata.com/>

Idatalink interface module flashing:

- <http://compustar.idatalink.com>

Drone activation and testing:

- <http://accounts.dronemobile.com/>

Tech Support page Facebook access:

- <https://www.facebook.com/groups/Firstechtechsupportgroup/?fref=nf>

Vehicle wiring database:

- <http://www.firstechdata.com/>

Operation and training videos

- <https://www.youtube.com/channel/UCvLp0NC-DQnoPJVly7do5Kg>

Dealer activation/flashing sites:

Drone activation account:

- <https://accounts.dronemobile.com>

Idatalink and Firstech flashing site:

- <http://compustar.idatalink.com>
- <http://arcticstart.idatalink.com>
- <http://maestro.idatalink.com/>